



IMPORTANT SAFETY NOTICE

For Ages 2 to 12 Years. Adult installation required.

Adult supervision required. There is risk of serious head injury or death due to falls from equipment placed over hard surfaces.

The proper installation of your swing accessories is vital for the safety of your children. All Creative Playthings accessories are designed for use as replacements for metal or wood play set accessories. You must be sure that your play set uses swing hanger assemblies that contain nylon bushings. **This product will fail and cause injury if used without proper swing hangers.**

If the intended installation does not have the appropriate swing hanger assemblies we recommend the use of Creative Playthings Ny-Glide™ swing Connectors. Ny-Glide™ swing connectors are available at your Creative Playthings dealer.

In order to avoid potential accidents, caution children to use this accessory only in its intended manner. A child should never wrap the rope or chain around any part of their body. Helmets and other items that can wrap around a child's neck, can become entangled or entrapped, and lead to strangulation or death.

At the beginning of each play season reinstall swings that were removed for the cold season. Tighten all hardware. Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed. Check metal parts for rust. If found, sand and repaint using a non lead-based paint meeting the requirements of 16 CFR 1303.

Once a month during play season check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. At the end of each play season or when the temperature drops below freezing, remove and store swing.

FOR RESIDENTIAL USE ONLY CREATIVE PLAYTHINGS 33 Loring Drive Framingham, MA 01702

19053-200 Rev E (02-21)

© Copyright 2001, Creative Playthings. Printed in China.

Swing Accessory Notice



IMPORTANT SAFETY NOTICE

For Ages 2 to 12 Years. Adult installation required.

Adult supervision required. There is risk of serious head injury or death due to falls from equipment placed over hard surfaces.

The proper installation of your swing accessories is vital for the safety of your children. All Creative Playthings accessories are designed for use as replacements for metal or wood play set accessories. You must be sure that your play set uses swing hanger assemblies that contain nylon bushings. **This product will fail and cause injury if used without proper swing hangers.**

If the intended installation does not have the appropriate swing hanger assemblies we recommend the use of Creative Playthings Ny-Glide™ swing Connectors. Ny-Glide™ swing connectors are available at your Creative Playthings dealer.

In order to avoid potential accidents, caution children to use this accessory only in its intended manner. A child should never wrap the rope or chain around any part of their body. Helmets and other items that can wrap around a child's neck, can become entangled or entrapped, and lead to strangulation or death.

At the beginning of each play season reinstall swings that were removed for the cold season. Tighten all hardware. Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed. Check metal parts for rust. If found, sand and repaint using a non lead-based paint meeting the requirements of 16 CFR 1303.

Once a month during play season check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. At the end of each play season or when the temperature drops below freezing, remove and store swing.

FOR RESIDENTIAL USE ONLY CREATIVE PLAYTHINGS 33 Loring Drive Framingham, MA 01702

19053-200 Rev E (02-21)

© Copyright 2001, Creative Playthings. Printed in China.

Swing Accessory Notice



IMPORTANT SAFETY NOTICE

For Ages 2 to 12 Years. Adult installation required.

Adult supervision required. There is risk of serious head injury or death due to falls from equipment placed over hard surfaces.

The proper installation of your swing accessories is vital for the safety of your children. All Creative Playthings accessories are designed for use as replacements for metal or wood play set accessories. You must be sure that your play set uses swing hanger assemblies that contain nylon bushings. **This product will fail and cause injury if used without proper swing hangers.**

If the intended installation does not have the appropriate swing hanger assemblies we recommend the use of Creative Playthings Ny-Glide™ swing Connectors. Ny-Glide™ swing connectors are available at your Creative Playthings dealer.

In order to avoid potential accidents, caution children to use this accessory only in its intended manner. A child should never wrap the rope or chain around any part of their body. Helmets and other items that can wrap around a child's neck, can become entangled or entrapped, and lead to strangulation or death.

At the beginning of each play season reinstall swings that were removed for the cold season. Tighten all hardware. Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed. Check metal parts for rust. If found, sand and repaint using a non lead-based paint meeting the requirements of 16 CFR 1303.

Once a month during play season check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. At the end of each play season or when the temperature drops below freezing, remove and store swing.

FOR RESIDENTIAL USE ONLY CREATIVE PLAYTHINGS 33 Loring Drive Framingham, MA 01702

19053-200 Rev E (02-21)

© Copyright 2001, Creative Playthings. Printed in China.

Swing Accessory Notice