
Creative Playthings


MODEL: VARIOUS ASSEMBLY MANUAL

BACK-TO-BACK GLIDER

ADULT ASSEMBLY REQUIRED. Intended for Ages 2 to 12 Years.

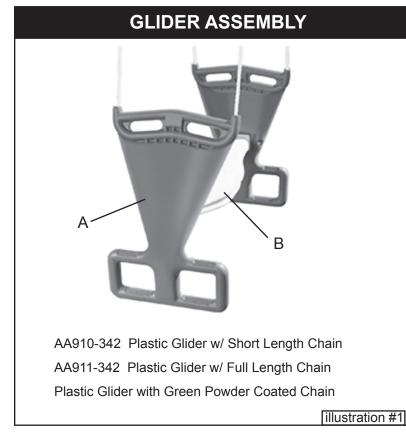

▲ CAUTION: Small Parts. Keep from children until fully assembled

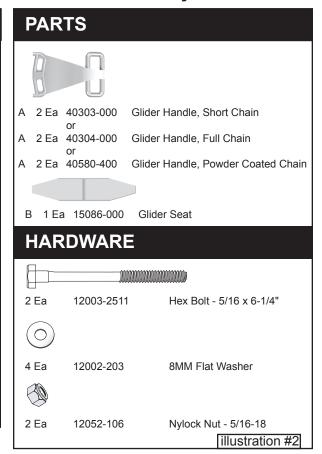


Plastic Glider Assembly:

Locate and set aside the 6-1/4" Hex Bolt, Flat Washers, and Nylock Nut for each of the Glider Handle Assemblies (A). Insert each end of the Glider Seat (B) into a Glider Handle Assembly (A).

Install the 6-1/4" Hex Bolt, Flat Washers, and Nylock Nut into each of the Glider Handle Assemblies (A) as shown in illustration 3. Tighten the Nylock Nut until the bolt threads are flush with the end of the Nylock Nut.

CAUTION: DO NOT over-tighten the Nylock Nut. The bolt threads should extend no more than 2 threads beyond the end of the Nylock Nut. Overtightening can damage the Glider Assembly and cause injury. Check this connection frequently to see if the Nylock Nut stays in position. If there is any problem keeping the Nylock Nut in position, replace it immediately.

n the uid s m m on, two threads exposed

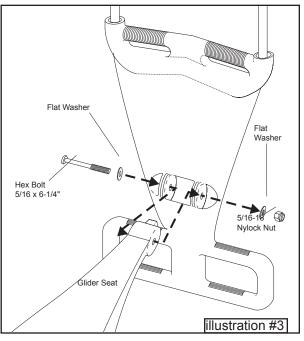

Back-to-Back Glider