 



ADULT ASSEMBLY REQUIRED.
Intended for Ages 2 to 12 Years.

⚠ CAUTION: Small Parts. Keep from children until fully assembled

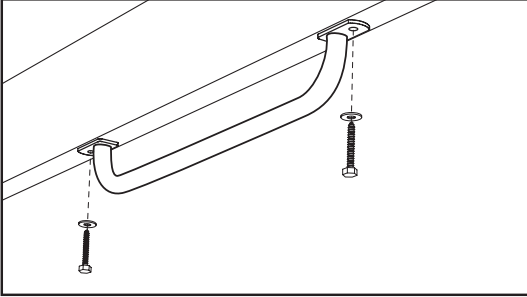


SLIDE HANDLE

 © Copyright 2004, Creative Playthings. Printed in U.S.A.



(2) 1/4 x 1-1/2" Lag Screw - 17036-801

 (2) 1/4" Flat Washer
12002-205

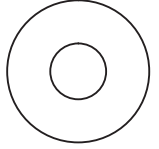


Mount the Slide Handle horizontally to the underside of the support above the top of your slide. Before installation ensure that there is enough headroom for your child to pass comfortably below the Slide Handle. Review the safety information in the manual that was supplied with your play-set before installation. The support to which the Slide Handle is fastened should be at least 1-1/8" thick.

Hold the Slide Handle in place, mark the attachment points on the wood with a pencil. Pilot drill a 3/16" diameter hole 1" deep. Fasten the Slide Handle using the 1/4 x 1-1/2" Lag Screws and 1/4" Flat Washers included. A ratchet wrench with a 7/16" socket is recommended to tighten the Lag Screw. Please note that this hardware is specially coated for corrosion resistance. If using non-Creative Playthings hardware it MUST be stainless steel or galvanized.

19664-100 Rev C (03-21)


ADULT ASSEMBLY REQUIRED.
Intended for Ages 2 to 12 Years.

⚠ CAUTION: Small Parts. Keep from children until fully assembled

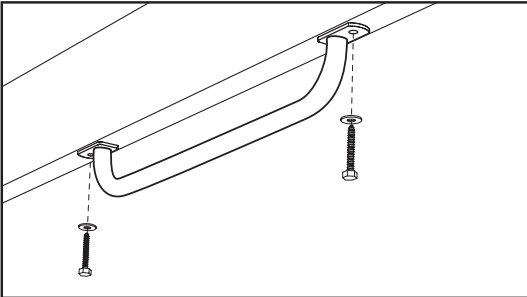


SLIDE HANDLE

 © Copyright 2004, Creative Playthings. Printed in U.S.A.



(2) 1/4 x 1-1/2" Lag Screw - 17036-801

 (2) 1/4" Flat Washer
12002-205

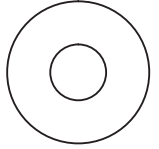


Mount the Slide Handle horizontally to the underside of the support above the top of your slide. Before installation ensure that there is enough headroom for your child to pass comfortably below the Slide Handle. Review the safety information in the manual that was supplied with your play-set before installation. The support to which the Slide Handle is fastened should be at least 1-1/8" thick.

Hold the Slide Handle in place, mark the attachment points on the wood with a pencil. Pilot drill a 3/16" diameter hole 1" deep. Fasten the Slide Handle using the 1/4 x 1-1/2" Lag Screws and 1/4" Flat Washers included. A ratchet wrench with a 7/16" socket is recommended to tighten the Lag Screw. Please note that this hardware is specially coated for corrosion resistance. If using non-Creative Playthings hardware it MUST be stainless steel or galvanized.

19664-100 Rev C (03-21)


ADULT ASSEMBLY REQUIRED.
Intended for Ages 2 to 12 Years.

 ⚠ CAUTION: Small Parts. Keep from children until fully assembled

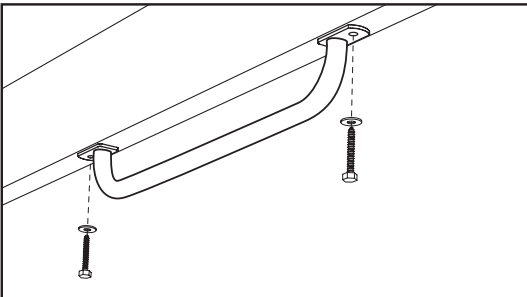


SLIDE HANDLE

 © Copyright 2004, Creative Playthings. Printed in U.S.A.



(2) 1/4 x 1-1/2" Lag Screw - 17036-801

 (2) 1/4" Flat Washer
12002-205

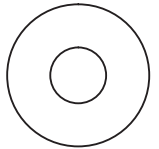

Mount the Slide Handle horizontally to the underside of the support above the top of your slide. Before installation ensure that there is enough headroom for your child to pass comfortably below the Slide Handle. Review the safety information in the manual that was supplied with your play-set before installation. The support to which the Slide Handle is fastened should be at least 1-1/8" thick.

Hold the Slide Handle in place, mark the attachment points on the wood with a pencil. Pilot drill a 3/16" diameter hole 1" deep. Fasten the Slide Handle using the 1/4 x 1-1/2" Lag Screws and 1/4" Flat Washers included. A ratchet wrench with a 7/16" socket is recommended to tighten the Lag Screw. Please note that this hardware is specially coated for corrosion resistance. If using non-Creative Playthings hardware it MUST be stainless steel or galvanized.

19664-100 Rev C (03-21)