

 
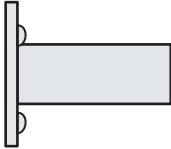
 
 
Creative Playthings®

AJ952-400
ASSEMBLY MANUAL

7 FT. SWOOSH SLIDE



PARTS

- 1 15140-400 7 Ft. Swoosh Slide, Green
- 50398-700 Swoosh Slide Skybox Adapter Pack:

- 1 40658-102 Slide Mount
- 1 50398-701 Hardware Bag, 7 Ft. Swoosh Slide Adapter:

- 3 17001-104 Weld Nut, 1/4"
- 
- 4 17020-113 Phillips Screw, #10 x 2-1/2"
- 
- 3 17119-1209 Truss Head Bolt, 1/4 x 3"

Review the original play set assembly manual and owners manual before assembly.

Step 1 - Remove Wall Slats

Determine the desired position of the Swoosh Slide. It is important the exit of the slide is at least 6 feet from any obstruction and does not conflict with any other play activity. See the original play set assembly manual for the appropriate ground cover. Remove the wall slats for the desired opening. Leave an opening that is wide enough to fit the Slide Mount.

Step 2 - Attach Slide Mount and Slide

Place the Slide Mount on the Skybox platform, snug against the Skybox Platform Side, in the opening created. Rest the top of the Slide on the Slide Mount with the Slide aligned squarely to the gym. Before drilling holes check to see that there are no obstructions under the platform. Adjust the position accordingly.

Once placement is determined, fasten the Slide mount to the platform using four #10 x 2-1/2" Screws. Drill three 5/16" diameter holes through the Slide, Slide Mount and platform at the indentions in the top of the Slide. Fasten the assembly to the platform using the Truss Head Bolts and Weld Nuts provided.

