

# Creative Playthings®

## DELUXE HAND GRIPS

SKU # AJ957-400

Creative Playthings takes great care to design its products with your child's safety in mind. However, only by careful **supervision** and explanation to your children, can you be assured of safe play time on any product designed for use by children. We ask you to carefully read the instructions before using the product. **Do not allow children to play with parts prior to assembly.**

**ADULT ASSEMBLY REQUIRED.**  
**Intended for Ages 2 to 12 Years.**

**⚠ CAUTION: Small Parts. Keep from children until fully assembled**

### Contents:

2 each 14179-400 Deluxe Hand Grip

50403-700 Hardware Bag:

4 each 17036-601 Lag Screw, 1/4 x 1-1/2"

4 each 12002-205 Flat Washer, 1/4"

### Tools Required:

7/16" Wrench

1/8" Drill (optional)

### Installation:


The Deluxe Hand Grip can be installed in place of the standard Creative Playthings plastic hand grip. In this case follow the instructions included with the Gym and use the hardware provided for the original Hand Grips. In some cases the hex bolt assembly will have to be inverted with the weld nut pushed through the holes in the Hand Grip.

or


If using the Hand Grips in another position, be sure that the wood is thick enough to receive the 1-1/2"

Lag Screws. Locate the best position for the Hand grips; Just above the level of the platform is recommended. Attach each Hand Grip using two of the included 1/4" Lag Screws and Flat Washers, as shown. Drill 1/8" diameter pilot holes for the Lag Screws and tighten them with a 7/16" wrench.

**Warning: The Deluxe Hand Grip must be oriented as shown in the illustration. Installing the Grip upside-down could cause injury, according to ASTM guidelines.**

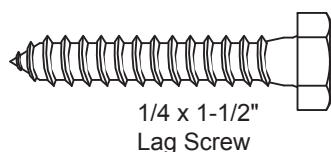

1/4 x 1-1/2"  
Lag Screw

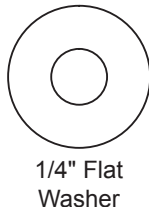

1/4" Flat  
Washer

DELUXE HAND GRIPS

19722-100 Rev C (03-21)

© Copyright 2006, Creative Playthings. Printed in China.

# Creative Playthings®

## DELUXE HAND GRIPS

SKU # AJ957-400

Creative Playthings takes great care to design its products with your child's safety in mind. However, only by careful **supervision** and explanation to your children, can you be assured of safe play time on any product designed for use by children. We ask you to carefully read the instructions before using the product. **Do not allow children to play with parts prior to assembly.**

**ADULT ASSEMBLY REQUIRED.**  
**Intended for Ages 2 to 12 Years.**

**⚠ CAUTION: Small Parts. Keep from children until fully assembled**

### Contents:

2 each 14179-400 Deluxe Hand Grip

50403-700 Hardware Bag:

4 each 17036-601 Lag Screw, 1/4 x 1-1/2"

4 each 12002-205 Flat Washer, 1/4"

### Tools Required:

7/16" Wrench

1/8" Drill (optional)

### Installation:


The Deluxe Hand Grip can be installed in place of the standard Creative Playthings plastic hand grip. In this case follow the instructions included with the Gym and use the hardware provided for the original Hand Grips. In some cases the hex bolt assembly will have to be inverted with the weld nut pushed through the holes in the Hand Grip.

or


If using the Hand Grips in another position, be sure that the wood is thick enough to receive the 1-1/2"

Lag Screws. Locate the best position for the Hand grips; Just above the level of the platform is recommended. Attach each Hand Grip using two of the included 1/4" Lag Screws and Flat Washers, as shown. Drill 1/8" diameter pilot holes for the Lag Screws and tighten them with a 7/16" wrench.

**Warning: The Deluxe Hand Grip must be oriented as shown in the illustration. Installing the Grip upside-down could cause injury, according to ASTM guidelines.**

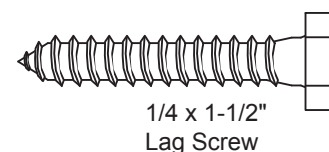

1/4 x 1-1/2"  
Lag Screw

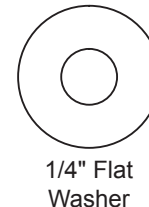

1/4" Flat  
Washer

DELUXE HAND GRIPS

19722-100 Rev C (03-21)

© Copyright 2006, Creative Playthings. Printed in China.