


# Gable Fan Installation


Model:  
SM964-402

Creative Playthings®

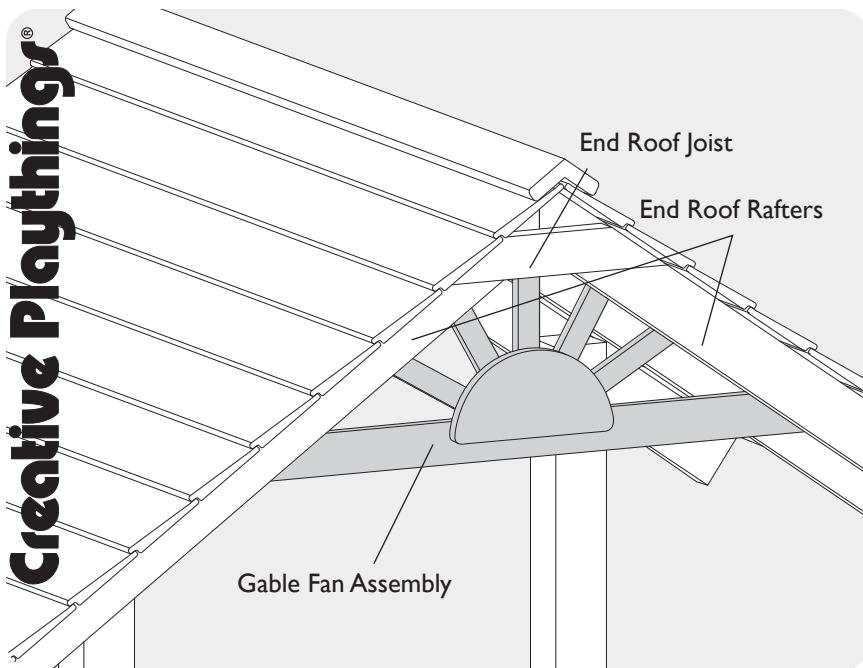


All hardware on this set is specially coated for corrosion resistance. If non-Creative Playthings hardware is used, it must be galvanized or stainless steel.

## Parts:

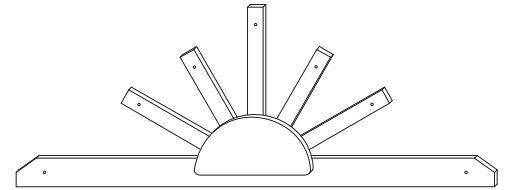

### SM964-402 Gable End Fan, Brown

 
- 2 40497-402 Gable End Fan Assembly, Brown
- 1 50448-700 Hardware Bag, Gable Fan



### 50448-700 Hardware Bag, Gable End

- 14 17025-104 #8 x 1-1/4" Screw

## STEP ONE - Fasten Roof Panels

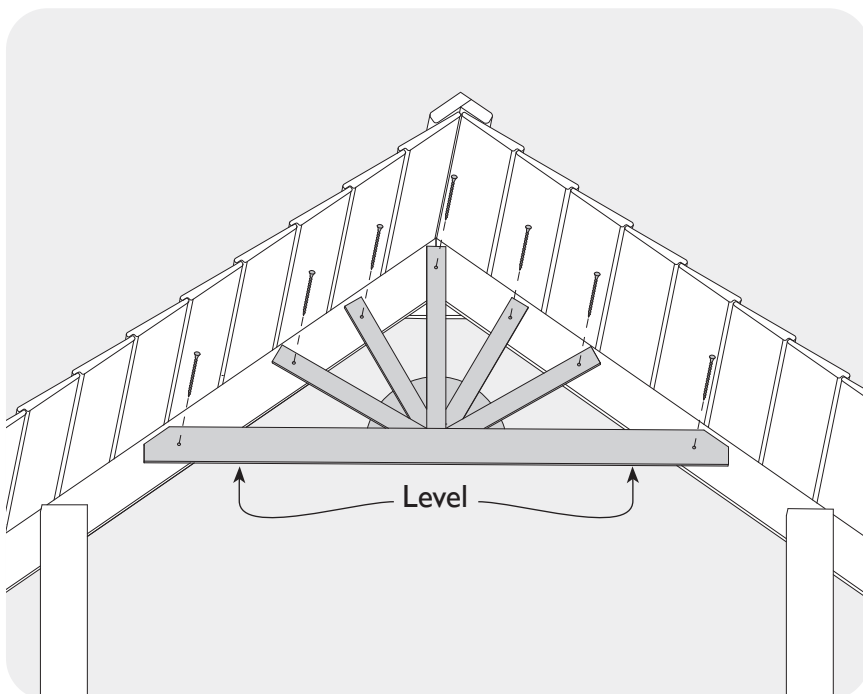

Before installing the Gable Fan Assembly, make sure that the End Roof Joists are mounted to the outside of the End Roof Rafters.

Fit one Gable Fan to the inside of the Roof Rafters at one end of the roof. Raise the Gable Fan until it stops against the bottom of the Roof Boards. Due to variations in board spacing and roof angle, not all points will touch the Roof Boards.

Use a level to align the bottom edge of the Gable Fan. Use seven 1-1/4" screws to fasten the Gable Fan to the Roof Rafters. Please note, if the space between the peak of the Roof Rafters is too wide, angle the top screw to make sure it gets purchase in one of the Rafters.

If a second Gable Fan is provided, repeat the procedure with the second Gable Fan at the other end of the roof.

Gable Fan Instructions - 19763-100C (05/20)

Copyright 2009, Creative Playthings - Printed in U.S.A. or China