

# Creative Playthings®

50545-555  
GLIDER BRACKET PACK

## GLIDER BRACKETS

### PARTS

4 14186-400 Glider Bracket

**50395-705 Hardware, Glider Fasteners**

8 12002-207 Flat Washer, 3/8"

4 12017-207 Lock Washer, 3/8"

4 17003-1413 Hex Bolt, 3/8 x 3-1/2"



4 17003-1813 Hex Bolt, 3/8 x 4-1/2"

4 12052-107 Nylock Nut, 3/8"


8 12002-206 Flat Washer, 5/16"

8 17036-602 Lag Screw, 5/16 x 1-1/2"


This package is for use with Premium Pine and Classic Pine swing beams. The Premium Pine beam is shown in the illustrations.

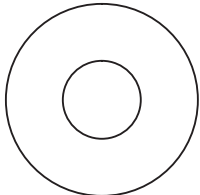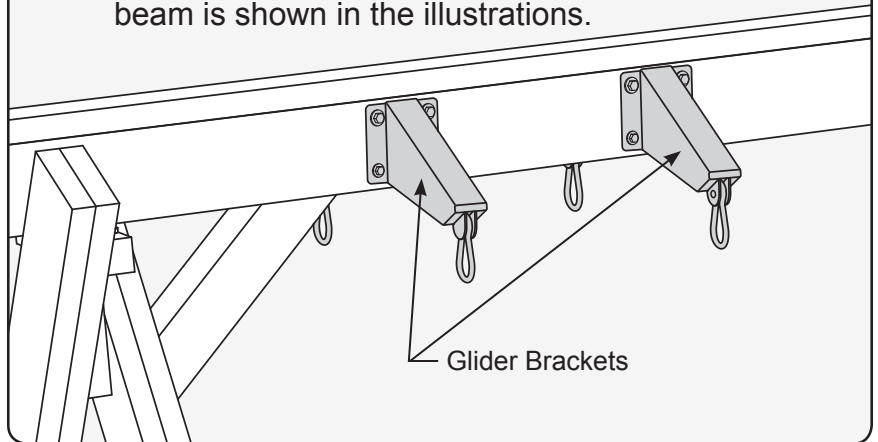


Flat Washer 3/8"

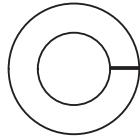

Lock Washer 3/8"

 


Lock Nut 3/8"

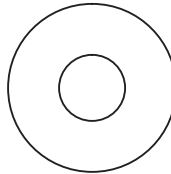


Flat Washer 5/16"

See instruction for the gym to which the Swing Beam is mounted for special safety information regarding required space, resilient ground cover, etc.

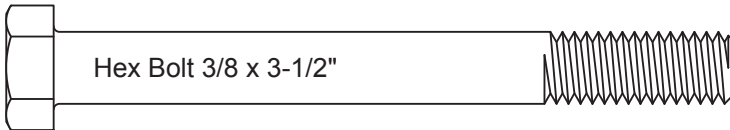

Hex Bolt 3/8 x 3-1/2"

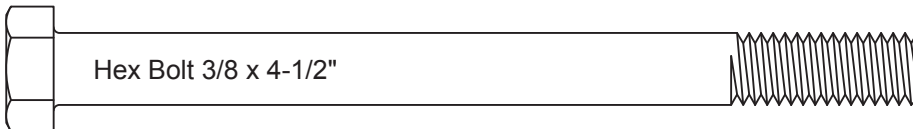


Hex Bolt 3/8 x 4-1/2"



Lag Screw 5/16 x 1-1/2"

**All hardware on this set is specially coated for corrosion resistance. If non-Creative Playthings hardware is used, it MUST be galvanized or stainless steel.**

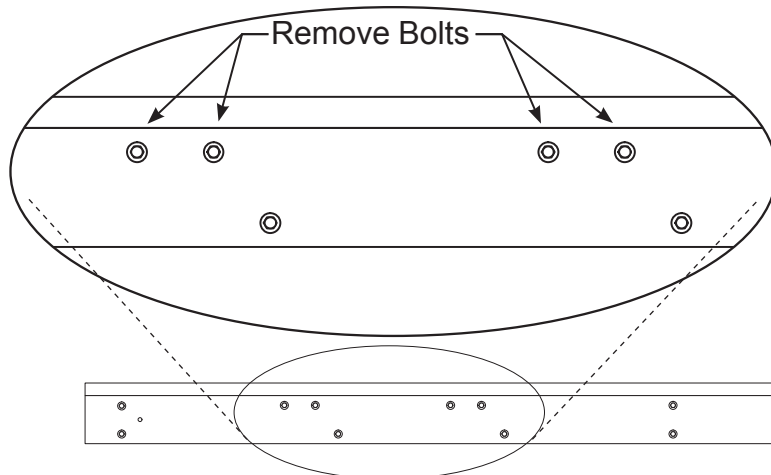

### STEP ONE – Prepare for Installation

If this is a new installation, do not install the pair of Swing Hangers closest to the Legs of the Swing Beam. If the Swing Hangers are already installed, remove them.

Find the two pair of Bolts above the Swing Hanger positions nearest the Legs. Remove the four Hex Bolts and associated washers and weld nuts.


# ASSEMBLY INSTRUCTIONS

## STEP TWO - Drill Holes

On one side of the beam, align the top holes of a Glider Bracket with two of the holes where Bolts were removed in the previous step. Mark the position of the lower holes of the Glider Bracket on the Beam. Do the same with another Glider Bracket and the other pair of holes.

Drill 3/16" diameter holes 1-1/2" into the Beam at the marks.


Turn the Beam over. Mark and drill the beam in the same manner.

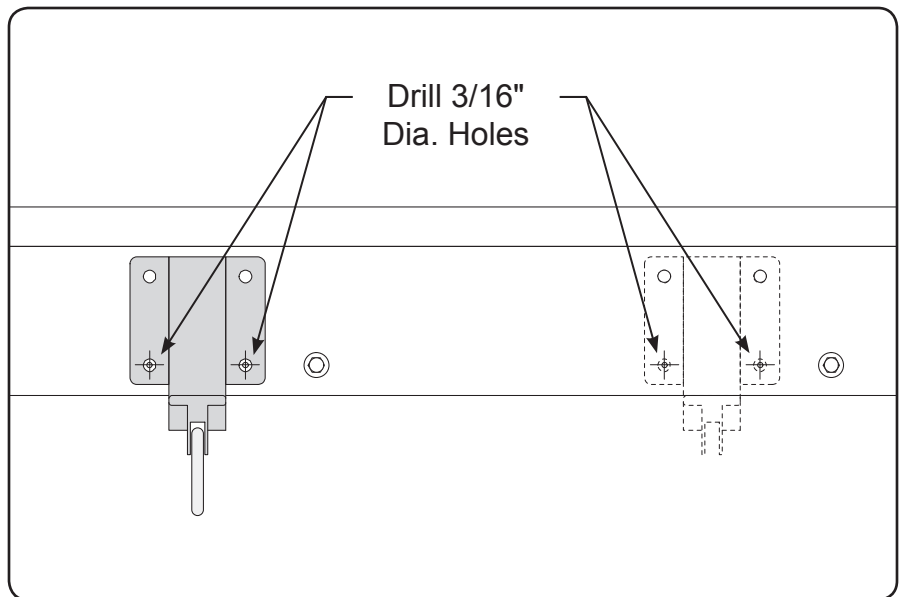

## STEP THREE - Fasten Glider Brackets

Fasten the Glider Brackets to the Beam Assembly using two 3/8 x 4-1/2" Hex Bolts\*, four 3/8 Flat Washers, and two Nylock Nuts for each pair of Brackets, in the upper holes as shown. Use one 5/16 x 1-1/2" Lag Screw with one 5/16 Flat Washer for each of the eight remaining lower holes.

\* Use 3/8 x 3-1/2" Bolts for the Classic Pine Beam.

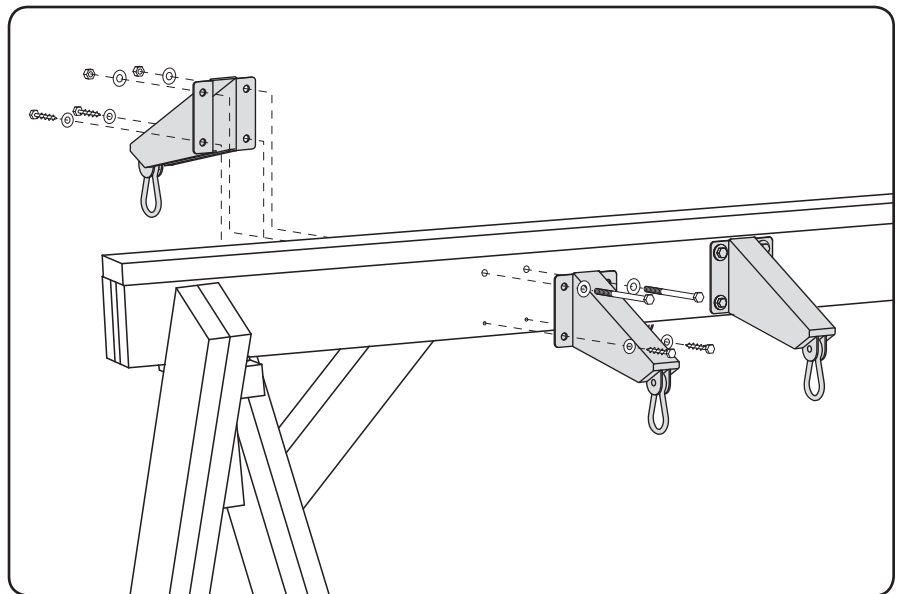

## STEP FOUR - Hang Swings

Hang the Back-to-Back Glider by hooking the chain in the snap hooks on the Glider Hangers. Follow the special assembly instructions included for the Back-to-Back Glider.

U.S. safety standards require a minimum clearance of 8" from the bottom of each Swing Accessory to the ground. U.K. (& E.U.) safety standards require a minimum clearance of 350mm (13-3/4") between the bottom of each Swing Accessory and the ground.

The height of each Swing Accessory is adjusted by using a different link in the chain. Be sure to hang the Swings Accessories with ground clearance greater than or equal to the safety standard for your region.

