



Dimensions of assembled package:  
17' 6" wide x 14' 3" deep x 11' 1" tall



The components of this gym can be combined with others to create different play sets. This is the best order of assembly to create this specific set.

Read this sheet and all instructions included with the different parts before assembly.

See the Instructions and Owner's Manual included in carton 63083-554 for important safety information.

#### Cartons for this Play Set:

1	63083-351	Clayton Box 1
1	63083-352	Clayton Box 2 (Hardware)
1	63083-554	Clayton Posts (Instructions)
1	63083-555	Clayton Roof (Hardware)
1	8570-202	10' Wave Slide
1	63080-101	Classic Pine Beam (Hdwre & Instr)
1	AA934-204	2 Swings, 1 Ring Trapeze

- The instructions found in 63083-554 give a complete description for assembling all features of the play tower.
- After step 29 switch to the instructions included with the Swing Beam (63080-101). Install the swing beam.
- After installing the beam and securing the ground stakes, check to assure all fasteners are secure.