

Cartons for this Play Set:

1	63083-351	Clayton Box 1
1	63083-352	Clayton Box 2 (Hardware)
1	63083-554	Clayton Posts (Instructions)
1	63083-555	Clayton Roof (Hardware)
1	8570-202	10' Wave Slide
1	63080-101	Classic Pine Beam (Hdwre & Instr)
1	AA934-204	2 Swings, 1 Ring Trapeze
1	63082-102	Classic Pine Monkey Bar (Hdwre & Instr)

Dimensions of assembled package:
17' 6" wide x 15' 2" deep x 11' 1" tall



The components of this gym can be combined with others to create different play sets. This is the best order of assembly to create this specific set.

Read this sheet and all instructions included with the different parts before assembly.

See the Instructions and Owner's Manual included in carton 63083-554 for important safety information.



- Start assembly of the tower using the instructions found in 63083-554.
- Step 17. Mount the access ladder to the back of the tower as shown above.
- Steps 23 and 24. Wait to install the wall slats until after installing the monkey bar.
- Mount the Monkey Bar (63082-102) to the front of the tower in the position shown.
- Install the wall slats as shown above. Continue assembling the gym as shown in the tower instructions.
- After step 29 switch to the instructions included with the Swing Beam (63080-101). Install the swing beam.
- After installing the beam and securing the ground stakes, double-check to assure all fasteners are secure.