



Cartons for this Play Set:

1	63098-111	Clarkdale Box 1
1	63083-352	Clayton Box 2
1	63083-353	Clayton Tent Roof (Hdwre & Inst.)
1	8364-400	Scoop Slide 10ft.
1	63061-202	Swing Beam - 3 Pos Premium Pine
1	63059-212	Swing Beam Legs 7ft. (Hdwre & Inst.)
1	31820-102	Swing Mount
1	SH946-102	Access Ladder 5ft. - Premium Pine
1	AA934-204	2 Swings, 1 Ring Trapeze

Dimensions of assembled package:
17' 6" wide x 14' 9" deep x 10' 5" tall

The components of this gym can be combined with others to create different play sets. This is the best order of assembly to create this specific set.

Read this sheet and all instructions included with the different parts before assembly.

See the Instructions and Owner's Manual included in carton 63083-353 for important safety information.

- The instructions found in 63083-353 give a complete description for assembling the play tower with the following exceptions:
- On step 11, the Swing Mount provided is different than the Swing Mount shown in the manual. The counter-bored holes in the Swing Mount should face the gym. Secure the bottom of the Swing Mount using the 5/16 x 4-1/2" Hex Bolt Assembly provided. The top hole will not align with the existing hole. Use a 3/8" diameter drill to make a hole through the top support and secure using one 5/16 x 4-1/2" Hex Bolt Assembly. (See illustration at right).
- Steps 20 & 21: Use the pre-assembled Access Ladder with plastic steps.
- Proceed with assembly. On step 26 use the Deluxe Hand-grips rather than the plastic handles.
- Please note the Clarkdale comes with a Scoop Slide rather than the slide shown in step 27. Installation is the same.
- Assemble the Swing Beam as shown in the instructions in 63059-212 and mount it to the tower.
- After installing the beam and securing the ground stakes, check to assure all fasteners are secure.
- Hang the swings and trapeze.

