Creative Plaything/

LEXI9WPP15

LEXINGTON PREMIUM PACK 15



The components of this gym can be combined with others to create different play sets. This is the best order of assembly to create this specific set.

Read this sheet and all instructions included with the different parts before assembly.

See the Instructions and Owner's Manual included in carton 63007-445 for important safety information.

Cartons for this Play Set:

1	63007-421	Lexington Gym 1 (Hardware)
1	63007-422	Lexington Gym 2
1	63007-423	Lexington Gym 3
1	63007-445	Lexington Roof (Hdwre & Instr)
1	SH946-102	Access Ladder, 5ft
1	AG942-400	Access Ladder Handles (Hdwre & Instr)
1	63058-202	4 Position Swing Beam
1	63060-222	9ft Swing Beam Legs (Hdwre & Instr)
1	50546-777	3 Swings, 1 Trapeze
1	15166-400	10 ft. Super Wave Slide
1	SM964-402	Gable Fans (Hdwre & Instr)
1	SM963-402	Dormer (Hdwre & Instr)
1	63073-101	Clubhouse Window Pk (Hdwre & Instr)
2	40456-402	End Panel
1	40459-402	Double Window Panel
1	40460-402	Door & Window Panel (Hardware)
1	SC910-800Q	Lexington Play Floor (Hdwre & Instr)

Direct Connect Adapter (Hdwre & Instr)

Spiral Slide, Green (Hardware)

Fireman's Pole (Hdwre & Instr)

Slide Handle (Hdwre & Instr)

- Start by assembling the Lexington tower. Instructions and hardware are in the cartons noted at left. The gym is rotated 90° from the position shown in the instructions.
- Wait to install the Access Ladder, Slide, and Wall Slats until after the rest of the play set is complete.
- Lex step 7 & 8. Do not install the angle braces. They conflict with the clubhouse panels.
- Lex step 12 or 19. Do not install the end wall support on the spiral slide end of the tower. The direct connect adapter will take the place.
- Lex step 13. Before installing the roof, find the post where the swing beam will mount. Drill 7/16" diameter holes through the post at 3", 7-1/4" and 15-1/2" below the top of the post as shown at right. The beam will be mounted to the front of the post using these holes. Insert one 5/16" weld nut into the top hole on the inside face of the post. Be sure the threads on the weld nut are clear, it will be captured by the roof support. Install the roof.
- Lex step 21. The swing mount isn't needed.
- Lex step 22. Do not install the safety rail.
- Mount the Swing Beam using instructions and hardware included in 63060-222. Mount the beam to the previously drilled holes at right rather than the way shown in the instructions. You may need to temporarily disconnect the roof from the post to put the beam in place.



63091-111

8400-202

AA917-603

AG943-400



- · Install the Play Floor (SC910-800Q).
- Install the Clubhouse Panels arranged as shown in the images in this guide. Instructions and hardware are attached to the door panel (40460-402).
- Install the Direct Connect Adapter (63091-111) and the Spiral Slide (8400-202) to the end opposite the swings.
- · Install the Gable Fans (SM964-402).
- Using a ladder, install the Dormer (SM963-402) in the position shown. Ladder access may be obstructed by later installations.
- Install the shutters and flower box from the Clubhouse Window Pack (63073-101) in the position shown above.
- Install the Fireman's Pole to the front post nearest the spiral slide as shown on the first page of this guide.
- Set the Access Ladder and Slide as shown on the first page of this guide. Check spacing.
- Secure the access ladder using the method shown in step 20 of the Lexington instructions.
- Fasten the Access Ladder Handles (AG942-400) to the Access Ladder.
- Install the slide mount and slide using the method shown in steps 28 and 29 of the Lexington instructions.
- Install wall slats in the postions shown in images, using the methods from the Lexington Instructions. Gaps must be narrower than 3-1/2" or wider than 9" to prevent potential head entrapment.

- Mount the hand grips to the entrance wall slats.
- Mount the Slide Handle (AG943-400) above the slide.
- Double-check all fasteners are secure and all recessed hardware is covered by hole caps.