



Cartons for this Play Set:


1	63089-116	Norfolk II Box 1 (Hdwre & Instr)
1	63089-216	Norfolk II Box 2
1	63089-316	Norfolk II Box 3
1	63089-416	Norfolk II Roof
1	63089-606	Norfolk II Cargo Net
1	63045-505	Norfolk Tire Swing (Hardware)
1	63058-202	4 Position Swing Beam
1	63076-303	9ft Beam Legs (Hdwre & Instr)
1	50546-777	3 Swings, 1 Trapeze
1	15166-400	10ft. Super Wave Slide
1	SH922-800Q	Ramp (Hdwre & Instr)

Dimensions of assembled package:
13' 2" wide x 23' 4" deep x 11' 6" tall

The components of this gym can be combined with others to create different play sets. This is the best order of assembly to create this specific set.

Read this sheet and all instructions included with the different parts before assembly.

See the Instructions and Owner's Manual included in carton 63089-116 for important safety information.

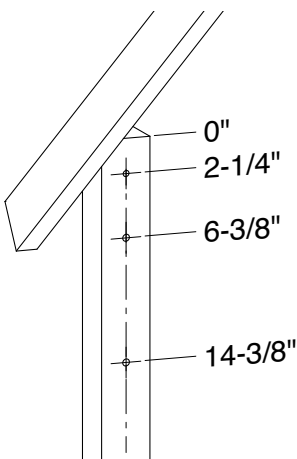

- Assemble the Norfolk tower. Instructions and hardware are in the cartons noted above right.
- Step 29. No swing mount is needed.
- Install the slide mount and slide using the method shown in steps 37 and 38 of the Norfolk instructions.
- Install the Ramp. Instructions and hardware are in the Ramp carton (SH922-800Q).
- Install the swing beam. Mount the beam to the inside of the back post as shown above. Instructions and hardware are in the 9 ft Swing Beam Leg carton (63076-303).
- 9 ft beam step 1. Prepare to mount the beam to the post by drilling from the inside of the post as shown at left. Drill a 3/8" diameter hole through the post 2-1/4" from the top. Drill 7/16" diameter holes through the post at 6-3/8" and 14-3/8" from the top.
- Complete installation of the beam. Ignore the notes regarding the Norfolk gym on the last page of the beam instructions. The notes are for a different Norfolk model.
- Double-check all fasteners are secure and recessed hardware is covered by hole caps.