

Dimensions of assembled package:
15' 6" wide x 14' 0" deep x 9' 10" tall



The components of this gym can be combined with others to create different play sets. This is the best order of assembly to create this specific set.

Read this sheet and all instructions included with the different parts before assembly.

See the Instructions and Owner's Manual included in carton 60082-451 for important safety information.

Cartons for this Play Set:

- | | | |
|---|-------------|---|
| 1 | 60082-451 | Spring Hill (1 of 3) (Hdwre & Inst.) |
| 1 | 60082-452 | Spring Hill (2 of 3) |
| 1 | 60082-453 | Spring Hill (3 of 3) |
| 1 | 8570-202 | 10' Wave Slide |
| 1 | 60081-102 | Playtime Swing Beam (Hdwre & Inst.) |
| 1 | AA934-204 | 2 Swings, 1 Ring Trapeze |
| 1 | AE914-412 | Steering Wheel (Hdwre & Inst.) |
| 1 | AA935-302 | Telephone (Hdwre & Inst.) |
| 1 | AE915-304 | Telescope (Hdwre & Inst.) |
| 1 | AA911-50541 | Glider & Econ. Brackets (Hdwre & Inst.) |



- The instructions found in 60082-451 give a complete description for assembling the play tower.
- After step 33 switch to the instructions included with the Swing Beam (63080-101) and Glider Economy Brackets (AA911-50541).
- Install the Glider Brackets on the Swing Beam. Do not install Swing Hangers below the Glider Brackets.
- Assemble the Swing Beam and mount it to the tower.
- After installing the beam and securing the ground stakes, check to assure all fasteners are secure.
- Install the Steering Wheel (AE914-412), Telephone (AA935-302), and Telescope (AE915-304) in the desired positions. Make sure none of them are placed in line with the exit of the slide or in line with the swings.
- Hang the swing, trapeze, and glider.