Creative Playthings

CHILDHOOD STARTS HERE

RIDG9WPP3B

RIDGEFIELD PREMIUM PACK 3B



Cartons for this Play Set:

I 63062-211 Ridgefield 1 (Hardware)
 I 63067-202 Ridgefield 2 (Instructions)
 I 63006-421 Williamsburg Box 1 (Hardware)

63006-422 Williamsburg Box 2
 63006-423 Williamsburg Box 3

1 63006-445 Williamsburg Roof (Hardware)

2 40456-402 End Panel Assembly 1 40457-402 Side Window Panel

1 40458-402 Door Panel (Hdwre & Instr) 1 SM964-402 Gable Fans (Hdwre & Instr)

SM963-402 Dormer (Hdwre & Instr)

SH946-102 Access Ladder 5ft. 8364-400 10 ft Scoop Slide 63058-202 4 Position Swing Beam

63076-303 9 ft Beam Legs (Hdwre & Instr)

50546-777 3 Swings, 1 Trapeze SD920-800Q Williamsburg Picnic Table

63093-102 Picnic Adapter 63079-102 Monkey Bars

The components of this gym can be combined with others to create different play sets. This is the best order of assembly to create this specific set. Read this sheet and all instructions included with the different parts before assembly.

See the Instructions and Owner's Manual included in carton 63067-202 for important safety information.



- Start by assembling the Ridgefield tower. Instructions are in carton 63067-202. Other instructions and hardware are in the cartons noted above. Do not use the Williamsburg instructions packed in the wood roof carton.
- Ridgefield step 18. The 9ft Beam will be mounted in the position pictured above, parallel to the roof. Drill the holes. Insert the weld nuts.
- · Ridgefield step 33. Wait to install the wall slats.
- Install the swing beam. Instructions are in carton 63076-303.
- · Set the ladder and slide as shown above. Check spacing.
- Fasten access brackets to the <u>inside</u> of the ladder rails.
 Secure the access ladder using the method shown in step 36 of the Ridgefield instructions.
- Install Monkey Bars (63079-102) on the front of the tower.
 Mount one side directly to the post.

- Install the slide mount and slide using the method shown in steps 38 and 39 of the Ridgefield instructions
- Install the wall slats in the positions shown above, using the methods from the Ridgefield instructions. Gaps must be narrower than 3-1/2" or wider than 9" to prevent potential head entrapment.
- Review the instructions for the Picnic Table (SD920-800Q) and Picnic Adapter (63093-102). Install the picnic table using the adapter to create a gap for access to the side closest to the swings. The standard installation leaves the gap under the porch but it can be installed with the gap at the back of the tower.
- Double-check all fasteners are secure and all recessed hardware is covered by hole caps.

RIDGEFIELD PREMIUM PACK 3B