


Yorktown/Ridgefield Skybox Panel


Creative Playthings®

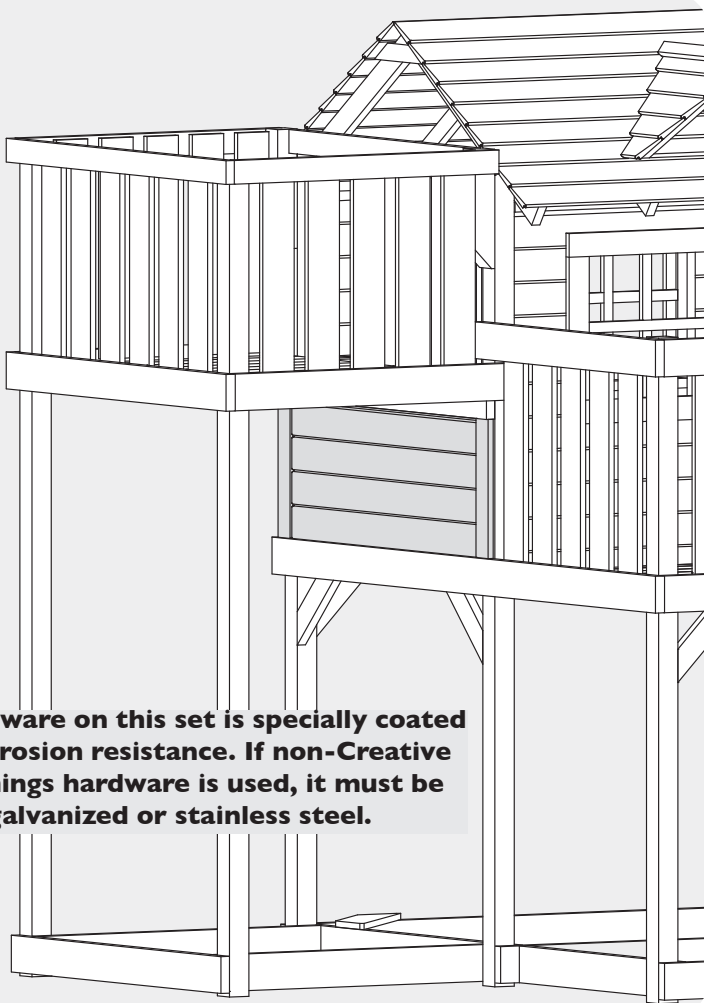


All hardware on this set is specially coated for corrosion resistance. If non-Creative Playthings hardware is used, it must be galvanized or stainless steel.

Parts:

63066-101 Yorktown Skybox Panel




A 4 33463-402 Panel Board 11/16 x 5-1/8 x 49-3/4"




B 2 33464-102 Panel End 5/4 x 4 x 19-7/8"

50494-700 Hardware, Yorktown Skybox Panel



25 17025-104 Screw #8 x 1-1/4"



32 17025-106 Screw #8 x 1-5/8"


SPECIAL NOTES AND INSTRUCTIONS:

If the Skybox is to be used on a Yorktown or Ridgefield Gym, it is best to install the Skybox before the Door and Window Panels are installed.

If installing on a pre-assembled Yorktown or Ridgefield gym, the Gable Fan, Window Panel and related assemblies adjacent to where the Skybox is to be mounted must be removed; they will not be reused. The Double Window Panel and the Door Panel should be removed temporarily for access to the hidden surfaces on the adjacent Posts.

STEP ONE - Install Skybox, then Wall Panels

Install the Skybox on a partially assembled Yorktown gym as shown at right. Once the Skybox assembly is finished, complete assembly of the Yorktown Gym. Do not install a Gable Fan adjacent to the Skybox

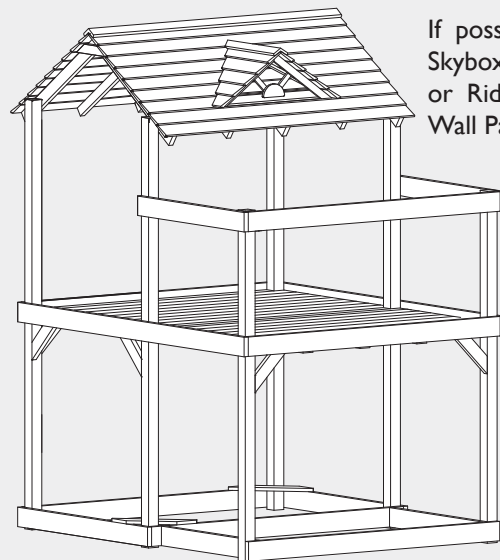


If possible, install the Skybox on a Yorktown or Ridgefield without Wall Panels

STEP TWO - Panel Ends

Mount the Panel Ends (B) to the outer surface of the Posts shown at right. Rest the Panel Ends against the top of the Platform Support and fasten them to the Posts using three #8 x 1-5/8" Screws each.

Due to variations in positioning the Skybox Platform Support, the Panel Ends may be too long to fit in the space indicated. If this is the case, cut the Panel Ends to fit using a saw.

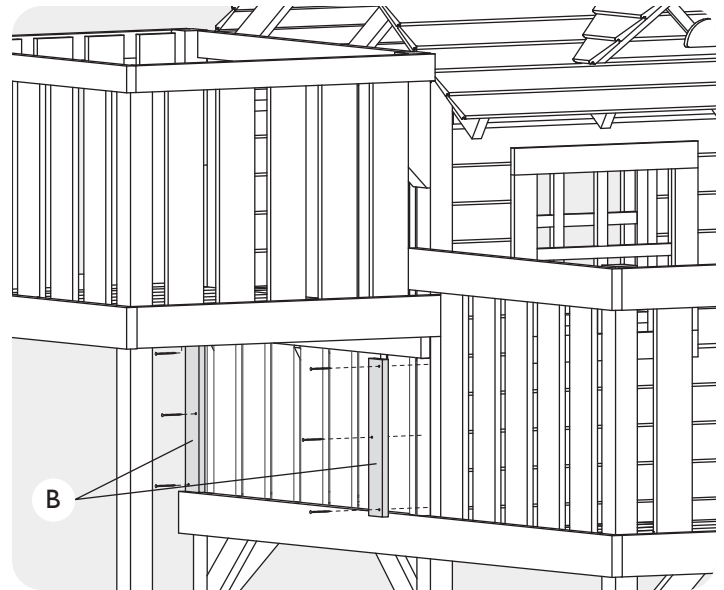

STEP THREE - Panel Boards

Important! Before installing the screws in this step, make sure the tips of the 1-5/8" screws will not protrude on the inside of the gym. If they do, use the #8 x 1-1/4" screws included. Make sure the 1-1/4" screws are seated solidly in the backing Wall Slats.

Evenly space the four Panel Boards (C) between the gym Platform Support and the Skybox Platform Support. Fasten each to the Wall Slats using six #8 x 1-5/8" Screws. If any hole in the Panel Boards is not backed by a Wall Slat, adjust the position of the Wall Slats.

Make sure a Gable Fan is not installed adjacent the Skybox.

