


## CLARKDALE ASSEMBLY SHEET



Components of Creative Playthings gyms can be combined with others to create different play sets. In this case, components of the Clayton gym combined with others are used to create the Clarkdale. Use the instructions from the Clayton combined with the information on this sheet to assemble the Clarkdale gym. Read this sheet and all instructions included with the different parts before assembly.










See Instructions and Owner's Manual in carton 63083-353 (tent) or 63083-554 (wood roof posts) for important safety information.

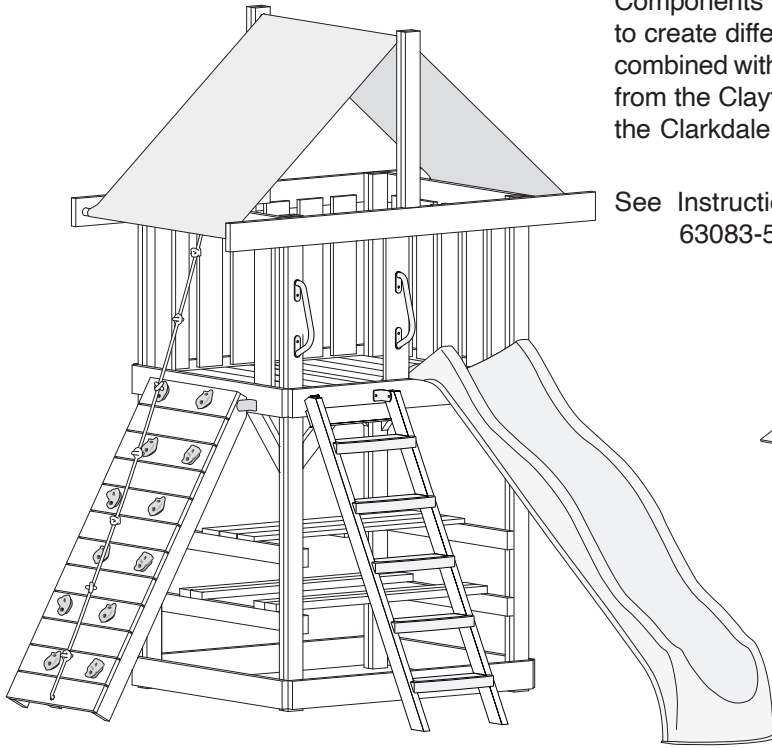










One carton is unique to the Clarkdale gym. The contents are listed below. Use the contents of Clarkdale Box 1 in place of Clayton Box 1.

Details of the different versions of the Clarkdale can be found on the following pages.

### CLARKDALE BOX 1 - 63098-111

	A	8	31682-102	Angle Brace 2 x 4 x 17-1/4"
	B*	1	32753-102	Rope Bottom Supp 5/4 x 4 x 15-3/4"
	C	2	33598-102	Angled Rail 2 x 4 x 67-1/4"
	E*	1	35177-102	Inner Stringer 2 x 3 x 55"
	F	13	35202-102	Wall Slat 5/4 x 6 x 29-1/2"
	G	1	35205-102	Entrance Slat 5/4 x 6 x 29-1/2"
	K	5	35246-102	Rock Board 5/4 x 6 x 27-1/4"
	L	1	35247-102	Rope Board 5/4 x 6 x 27-1/4"
	M	5	35248-102	Spacer Board 5/4 x 6 x 27-1/4"

### CLARKDALE BOX 1 (CONT'D)


	N	1	35249-102	Top Rock Board 5/4 x 6 x 27-1/4"
	O*	2	35276-102	End Deck Board 5/4 x 4 x 41-1/8"
	P*	1	35279-102	Narr Deck Board 5/4 x 4 x 46-5/8"
	Q	1	35351-102	Table Board 5/4 x 6 x 48-1/4"
	R*	1	40658-102	Slide Mount
	S	1	50277-100	Rock Pack (12), Green
	T	1	40400-100	Climbing Rope
		2	14179-400	Deluxe Hand Grip
		1	50574-700	Slide Bolt 2 Pack

\* Not visible in illustration on Page 6 of the Clayton Manual

# ASSEMBLY INSTRUCTIONS

## CLRKCP1 — CLARKDALE 1


Dimensions of assembled package:  
17' 6" wide x 14' 9" deep x 10' 5" tall

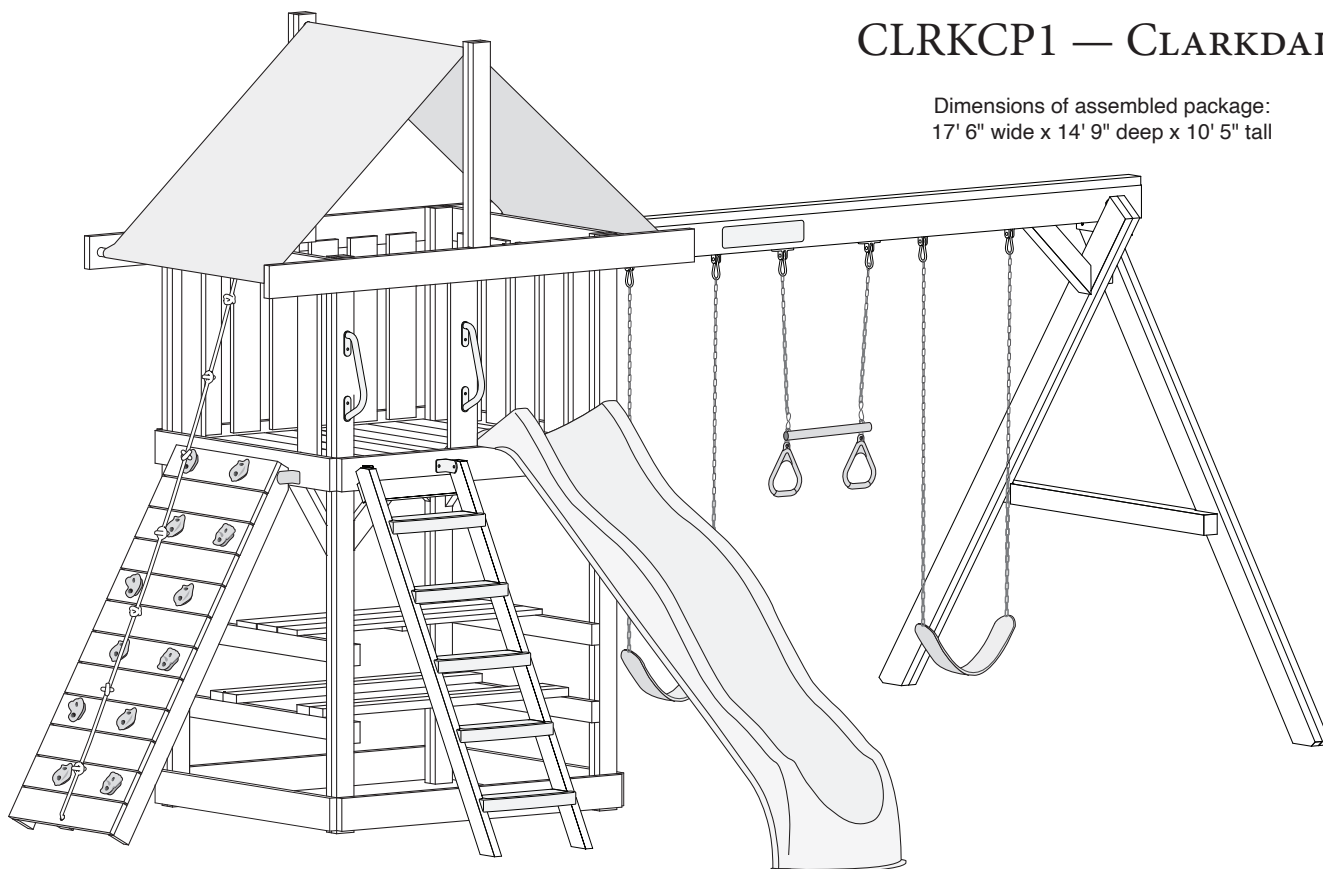

- The instructions found in 63083-353 give a complete description for assembling the play tower with the following exceptions:
- On step 11, the Swing Mount provided is different than the Swing Mount shown in the manual. The counter-bored holes in the Swing Mount should face the gym. Secure the bottom of the Swing Mount using the 5/16 x 4-1/2" Hex Bolt Assembly provided. The top hole will not align with the existing hole. Use a 3/8" diameter drill to make a hole through the top support and secure using one 5/16 x 4-1/2" Hex Bolt Assembly. (See illustration at right).
- Steps 20 & 21: Use the pre-assembled Access Ladder with plastic steps.
- Proceed with assembly. On step 26 use the Deluxe Hand Grips rather than the plastic handles.
- Use a Scoop Slide in step 27.
- Assemble the Swing Beam as shown in the instructions in 63059-212 and mount it to the tower.
- After installing the beam and securing the ground stakes, check to assure all fasteners are secure.
- Hang the swings and trapeze.

### Cartons for this Play Set:


1	63098-111	Clarkdale Box 1
1	63083-352	Clayton Box 2
1	63083-353	Clayton Tent (Hdwre & Inst.)
1	8364-400	Scoop Slide 10ft.
1	63061-202	Swing Beam - 3 Pos Premium
1	63059-212	Beam Legs 7ft. (Hdwre & Inst.)
1	31820-102	Swing Mount
1	SH946-102	Access Ladder 5ft. - Premium
1	AA934-204	2 Swings, 1 Ring Trapeze

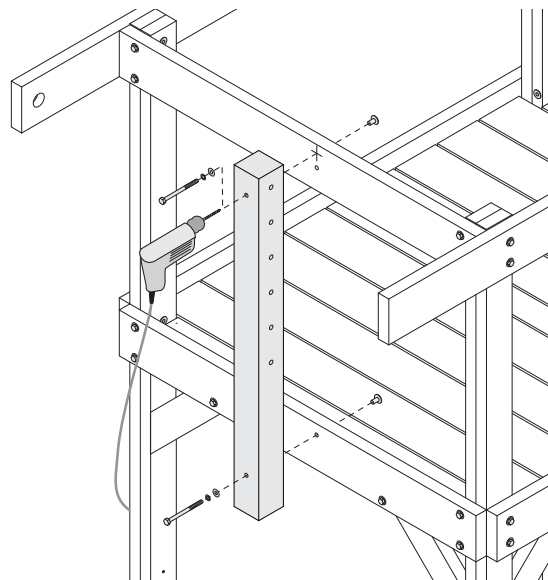

# ASSEMBLY INSTRUCTIONS

## CLRKCP2 — CLARKDALE 2


Dimensions of assembled package:  
17' 6" wide x 15' 3" deep x 10' 5" tall

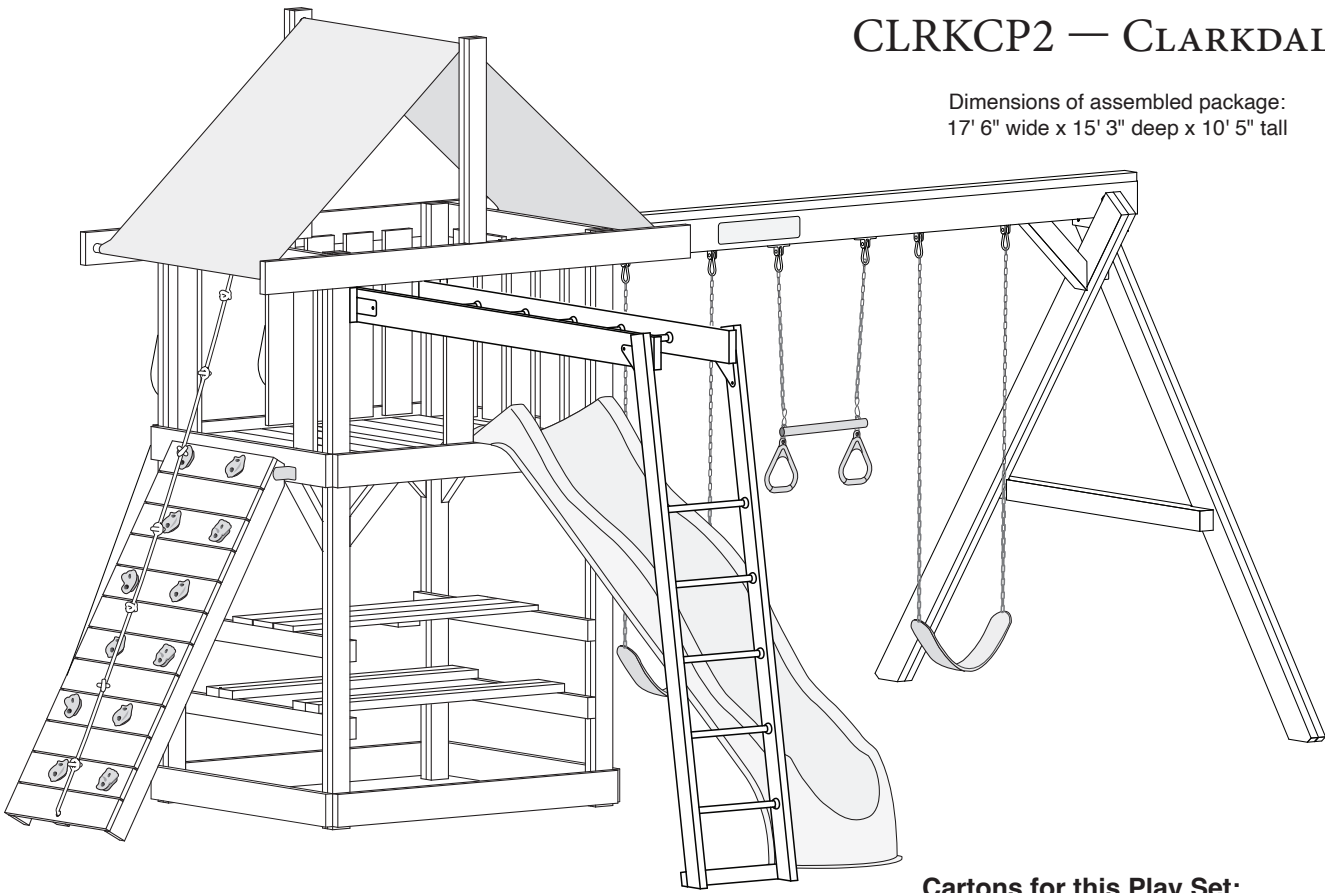

### Cartons for this Play Set:

1	63098-111	Clarkdale Box 1
1	63083-352	Clayton Box 2
1	63083-353	Clayton Tent (Hdwre & Inst.)
1	8364-400	Scoop Slide 10ft.
1	63061-202	Swing Beam - 3 Pos Premium
1	63059-212	Beam Legs 7ft. (Hdwre & Inst.)
1	31820-102	Swing Mount
1	SH946-102	Access Ladder 5ft. - Premium
1	AA934-204	2 Swings, 1 Ring Trapeze
1	63082-102	Monkey Bar (Hdwre & Inst.)


- The instructions found in 63083-353 give a complete description for assembling the play tower with the following exceptions:
- On step 11, the Swing Mount provided is different than the Swing Mount shown in the manual. The counter-bored holes in the Swing Mount should face the gym. Secure the bottom of the Swing Mount using the 5/16 x 4-1/2" Hex Bolt Assembly provided. The top hole will not align with the existing hole. Use a 3/8" diameter drill to make a hole through the top support and secure using one 5/16 x 4-1/2" Hex Bolt Assembly. (See illustration at right).
- Steps 20 & 21: Use the pre-assembled Access Ladder with plastic steps. Mount the access ladder to the back of the tower.
- Step 24. Wait to install the wall slats until after installing the monkey bar.
- Mount the Monkey Bar (63082-102) to the front of the tower in the position shown above.
- Proceed with assembly. On step 26 use the Deluxe Hand Grips. Hand grips should mount on the back of the set next to the Access Ladder.
- Please note the Clarkdale comes with a Scoop Slide rather than the slide shown in step 27. Installation is the same.
- Assemble the Swing Beam as shown in the instructions in 63059-212 and mount it to the tower.
- After installing the beam and securing the ground stakes, check to assure all fasteners are secure.
- Hang the swings and trapeze.

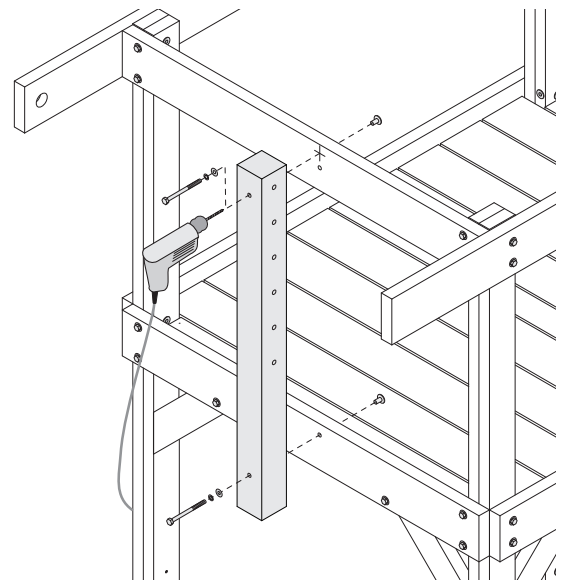

## ASSEMBLY INSTRUCTIONS

### CLRKCP3 — CLARKDALE 3


Dimensions of assembled package:  
17' 6" wide x 14' 9" deep x 11' 1" tall

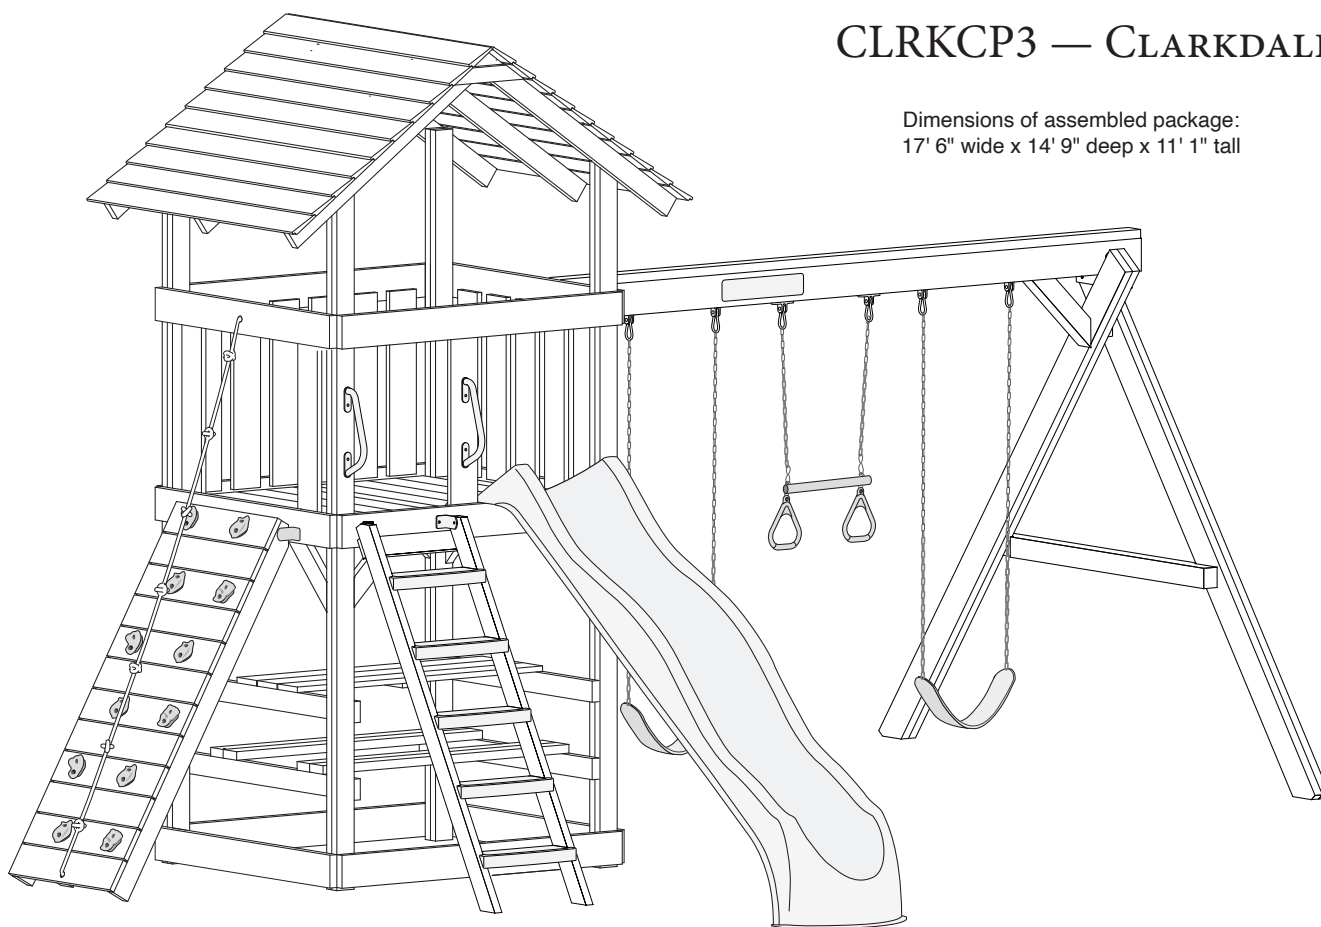

- The instructions found in 63083-554 give a complete description for assembling the play tower with the following exceptions:
- On step 15, the Swing Mount provided is different than the Swing Mount shown in the manual. The counter-bored holes in the Swing Mount should face the gym. Secure the bottom of the Swing Mount using the 5/16 x 4-1/2" Hex Bolt Assembly provided. The top hole will not align with the existing hole. Use a 3/8" diameter drill to make a hole through the top support and secure using one 5/16 x 4-1/2" Hex Bolt Assembly. (See illustration at right).
- Steps 16 & 17: Use the pre-assembled Access Ladder with plastic steps.
- Proceed with assembly. On step 25 use the Deluxe Hand Grips rather than the plastic handles.
- Please note the Clarkdale comes with a Scoop Slide rather than the slide shown in step 28. Installation is the same.
- Assemble the Swing Beam as shown in the instructions in 63059-212 and mount it to the tower.
- After installing the beam and securing the ground stakes, check to assure all fasteners are secure.
- Hang the swings and trapeze.

#### Cartons for this Play Set:

1	63098-111	Clarkdale Box 1
1	63083-352	Clayton Box 2
1	63083-554	Posts for Wd Roof (Hdwre & Inst.)
1	63083-555	Clayton Wood Roof
1	8364-400	Scoop Slide 10ft.
1	63061-202	Swing Beam - 3 Pos Premium
1	63059-212	Beam Legs 7ft. (Hdwre & Inst.)
1	31820-102	Swing Mount
1	SH946-102	Access Ladder 5ft. - Premium
1	AA934-204	2 Swings, 1 Ring Trapeze

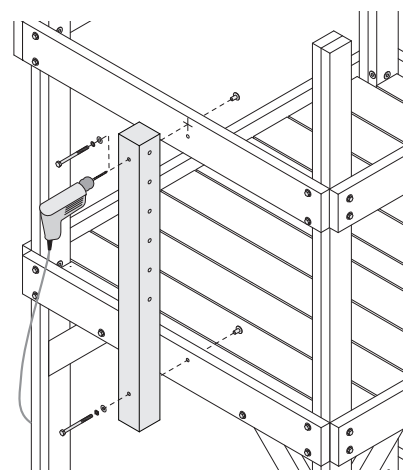




# ASSEMBLY INSTRUCTIONS

## CLRKCP4 — CLARKDALE 4

Dimensions of assembled package:  
17' 6" wide x 15' 3" deep x 11' 1" tall

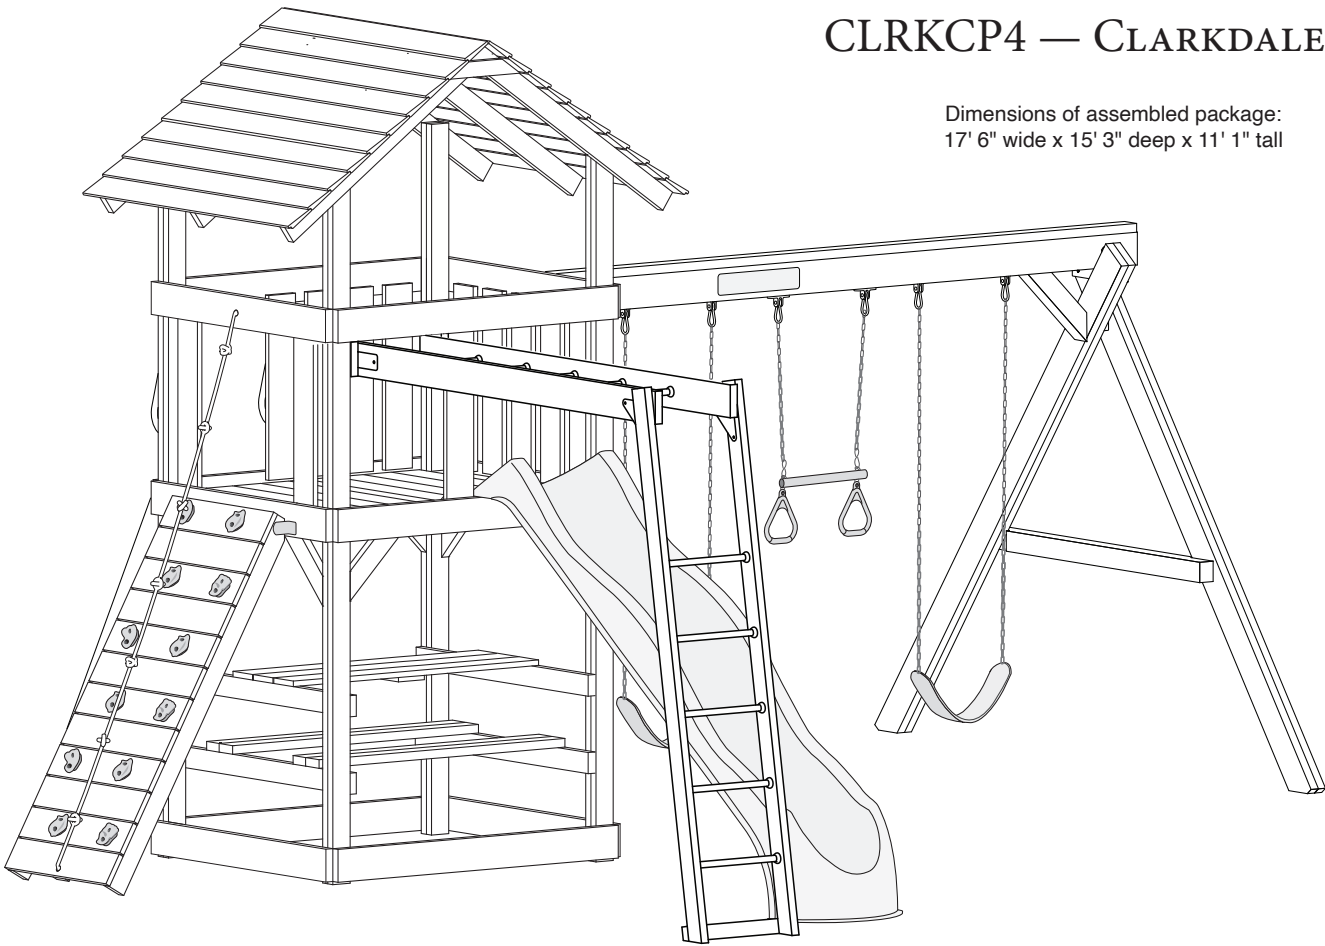

- The instructions found in 63083-554 give a complete description for assembling the play tower with the following exceptions:
- On step 15, the Swing Mount provided is different than the Swing Mount shown in the manual. The counter-bored holes in the Swing Mount should face the gym. Secure the bottom of the Swing Mount using the 5/16 x 4-1/2" Hex Bolt Assembly provided. The top hole will not align with the existing hole. Use a 3/8" diameter drill to make a hole through the top support and secure using one 5/16 x 4-1/2" Hex Bolt Assembly. (See illustration at right).
- Steps 16 & 17: Use the pre-assembled Access Ladder with plastic steps. Mount the access ladder to the back of the tower.
- Step 24. Wait to install the wall slats until after installing the monkey bar.
- Mount the Monkey Bar (63082-102) to the front of the tower in the position shown above.
- Proceed with assembly. On step 25 use the Deluxe Hand Grips rather than the plastic handles. Hand grips should mount on the back of the set next to the Access Ladder as shown above.
- Please note the Clarkdale comes with a Scoop Slide rather than the slide shown in step 28. Installation is the same.
- Assemble the Swing Beam as shown in the instructions in 63059-212 and mount it to the tower.
- After installing the beam and securing the ground stakes, check to assure all fasteners are secure.
- Hang the swings and trapeze.

### Cartons for this Play Set:

1	63098-111	Clarkdale Box 1
1	63083-352	Clayton Box 2
1	63083-554	Posts for Wd Roof (Hdwre & Inst.)
1	63083-555	Clayton Wood Roof
1	8364-400	Scoop Slide 10ft.
1	63061-202	Swing Beam - 3 Pos Premium
1	63059-212	Beam Legs 7ft. (Hdwre & Inst.)
1	31820-102	Swing Mount
1	SH946-102	Access Ladder 5ft. - Premium
1	AA934-204	2 Swings, 1 Ring Trapeze
1	63082-102	Monkey Bar (Hdwre & Inst.)

