

Dimensions of assembled package:
48' 3" wide x 34' 6" deep x 12' 9" tall



Yorktown Tower 1

Yorktown Tower 2

The components of this gym can be combined with others to create different play sets. This is the best order of assembly to create this specific set.


Read this sheet and all instructions included with the different parts before assembly.

See the Instructions and Owner's Manual included in carton 63062-222 for important safety information.


Cartons for this Play Set:

1 15140-400	7ft Rocket Slide & Foot (Hardware)	2 63081-102	Ice Cream Stand (Hdwre & Instr)
1 15166-400	Super Wave Slide	1 63089-116	Norfolk II Box 1 (Hdwre & Instr)
5 40456-402	End Window Panel	1 63089-216	Norfolk II Box 2
4 40459-402	Double Window Panel	1 63089-316	Norfolk II Box 3
4 40460-402	Door & Window Panel (Hardware)	1 63089-416	Norfolk II Wood Roof
1 50514-100	Tic Tac Toe (Hdwre & Instr)	2 63089-606	Norfolk II Cargo Net
1 50546-777	3 Swings, 1 Trapeze	1 63090-222	Chain Climber Frame (Hdwre & Instr)
1 50572-100	Norfolk Bridge Adapter (Hdwre & Instr)	1 63091-111	Spiral/Swoosh Direct Adapter (Hdwre & Instr)
3 63007-421	Lexington Gym 1 (Hardware)	1 8400-202	Spiral Slide, Green (Hardware)
3 63007-422	Lexington Gym 2	1 AA917-603	Fire Pole (Hdwre & Instr)
1 63007-423	Lexington Gym 3	1 AA918-603	Chin-up Bar (Hdwre & Instr)
1 63007-445	Lexington Wood Roof (Hdwre & Instr)	1 AG939-700	Crawl Tube (Hdwre & Instr)
1 63008-221	Skybox 1 (Hdwre & Instr)	2 AG942-400	Access Ladder Handles (Hdwre & Instr)
1 63008-222	Skybox 2	2 AG943-400	Slide Handle (Hdwre & Instr)
1 63033-102	Spiral Slide Skybox Mount (Hdwre & Instr)	1 AH210-102Q	Rock Climbing Wall (Hdwre & Instr)
1 63045-505	Tire Swing (Hardware)	1 AP970-104	Bubble Panel (Hdwre & Instr)
1 63058-202	4 Position Swing Beam	1 SC903-800Q	Skybox Play Walls (Hdwre & Instr)
1 63076-303	9ft Swing Beam Legs (Hdwre & Instr)	1 SC904-800Q	Skybox Play Floor (Hdwre & Instr)
2 63062-211	Yorktown/Ridgefield 1 (Hardware)	1 SC909-800Q	Lexington Play Walls (Hdwre & Instr)
2 63062-222	Yorktown 2 (Instructions)	3 SC910-800Q	Lexington Play Floor (Hdwre & Instr)
2 63062-301	Yorktown Wood Roof (Hardware)	1 SH304-101Q	Pinnacle Rock Wall (Hdwre & Instr)
2 63063-101	Yorktown Play Floor (Hdwre & Instr)	2 SH922-800Q	Ramp (Hdwre & Instr)
2 63064-101	Yorktown Play Walls (Hdwre & Instr)	2 SH946-102	Access Ladder, 5ft
1 63065-101	Yorktown Direct Adapter Panel (Hdwre & Instr)	1 SJ926-810	Skybox Wood Roof (Hdwre & Instr)
2 63073-101	Clubhouse Window Pk (Hdwre & Instr)	2 SJ951-102	Bridge (Hdwre & Instr)
1 63079-102	Monkey Bars (Hdwre & Instr)	5 SM963-402	Dormer (Hdwre & Instr)
		5 SM964-402	Gable Fans (Hdwre & Instr)

- The US Consumer Product Safety Commission (CPSC) recommends a clear open space of 61'4" x 43'4" for this swing set. This includes an area 6' from all elements and 18' in front and behind the swing beam. See the illustration at the top of the next page to determine starting placement for Tower 1.
- Start by assembling the first Yorktown tower. Instructions and hardware are in the cartons noted at above. Use the instructions in 63062-222 to assemble tower 1.
- Wait to install Access Ladders, Slides, and Wall Slats until after the entire tower is complete.
- York step 2. Do not install the Sandbox Center on the front of the tower. Use the Floor Transition from the Yorktown Play Floor (63063-101). See page 2 of the Yorktown Play Floor instructions. Secure the Sandbox backs but wait to install the floors.

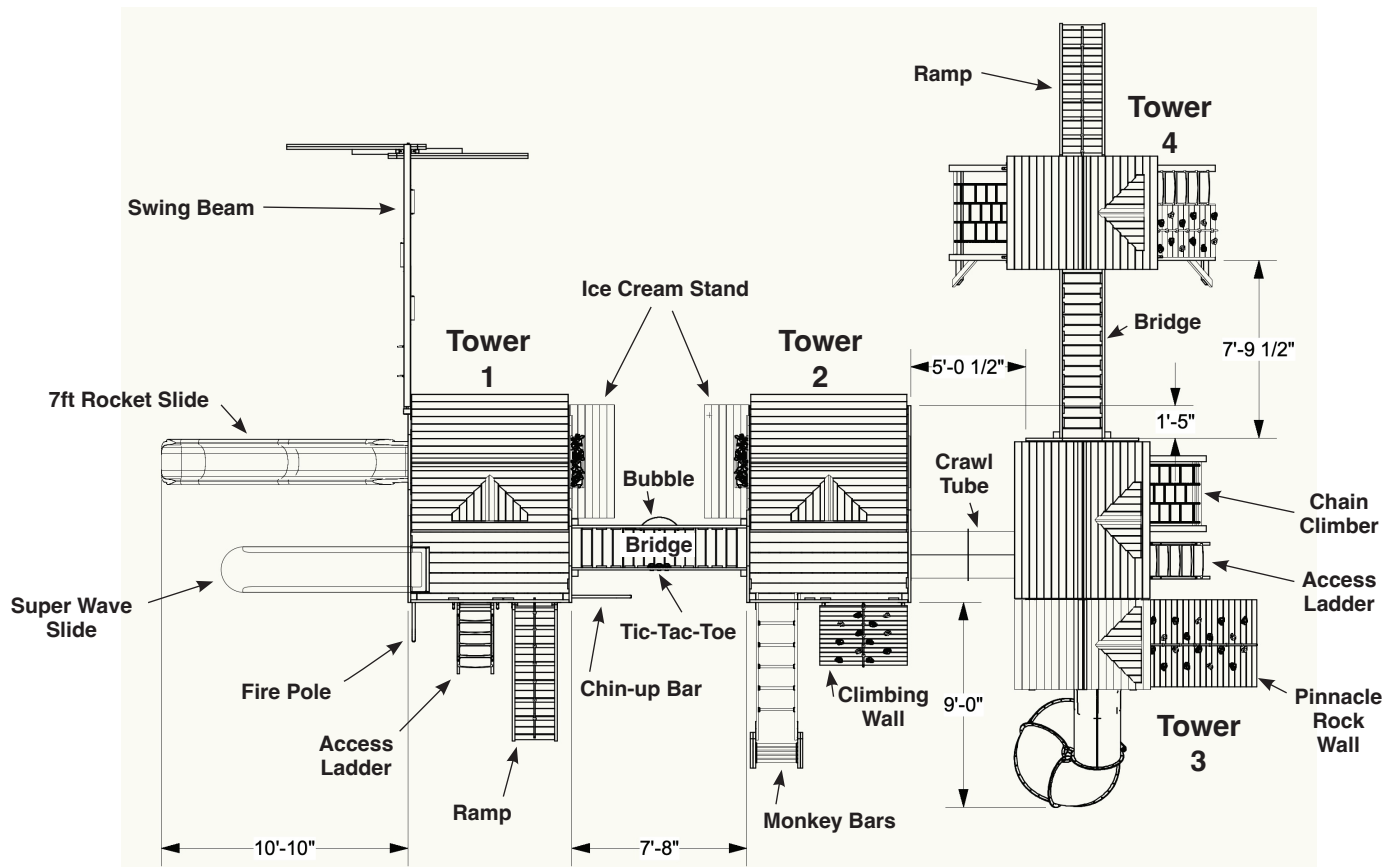

- York step 12. Due to the lower clubhouse panels that will be installed later, the Angle Braces on the back and sides of the gym are not needed.
- Skip York step 14. Do not install the stringer flanges.
- York step 19. Install the 9ft Beam in the position shown above. Instructions and hardware are in the 9' Swing Beam Leg Carton (63076-303).
- York step 24. Do Not install the End Panel, Panel Frame or Gable Fan at the end the slide is to be mounted.
- Skip York step 32. Safety Rails are not needed.
- Once the basic Yorktown tower 1 is assembled, assemble Yorktown tower 2 about 92" away from the Yorktown. The porches should align.
- York step 2. Do not install the Sandbox Center on the front of the tower. Use the Floor Transition from the Yorktown Play Floor (63063-101). See page 2 of the Yorktown Play Floor instructions. Secure the Sandbox backs but wait to install the floors.
- York step 12. Due to the lower clubhouse panels that will be installed later, the Angle Braces on the back and sides of the gym are not needed.
- Skip York step 14. Do not install the stringer flanges.
- York step 18. After installing the wall support, move the tower into place 92" from the other tower. Use the bridge rails from SJ951-102 to assure the alignment is exact.
- Mount the Bridge (SJ951-102) between the upper porches on tower 1 and tower 2. Leave off the wall slats until after installing the Bubble and Tic-Tac-Toe panels
- Continue assembly of tower two.
- Skip York step 19. No Beam will be mounted to this tower.
- Skip York step 32. Safety Rails are not needed.
- Wait to install the Wall Slats until after the whole play set is complete.
- On both towers, install the Yorktown porch play floor (63063-101) followed by the Lex play floor (SC910-800Q). Install the cleats and stringers for both before installing the deck boards.
- On both towers, install the lower clubhouse panels as shown in the instructions included with the Door & Window Panel (40460-402). Do not install the end window panels where the ice cream stands will mount.
- Install Ice Cream Stands (63081-102) on each tower. Each facing the other.
- Install the Yorktown Porch Play Walls (63064-101) on both towers. The openings should face opposite directions as shown on the first page of this guide.
- Install the shutters and flower boxes from the Clubhouse Window Packs (63073-101) above each Ice Cream Stand.
- Mount the Slide Direct Adapter (63091-111) to the end of tower 1.
- Install the Yorktown Direct Adapter Panel (63065-101) below the Direct Adapter.
- Attach the foot to the 7ft Rocket Slide (15140-400) and mount the slide to the Direct Adapter.
- Mount the Super Wave Slide (15166-400) to end of the upper porch on tower 1.
- Mount the Fire Pole (AA917-603), Access Ladder (SH946-102), Ramp (SH922-800Q), and Chin-up Bar (AA918-603) to tower 1 in the positions shown.

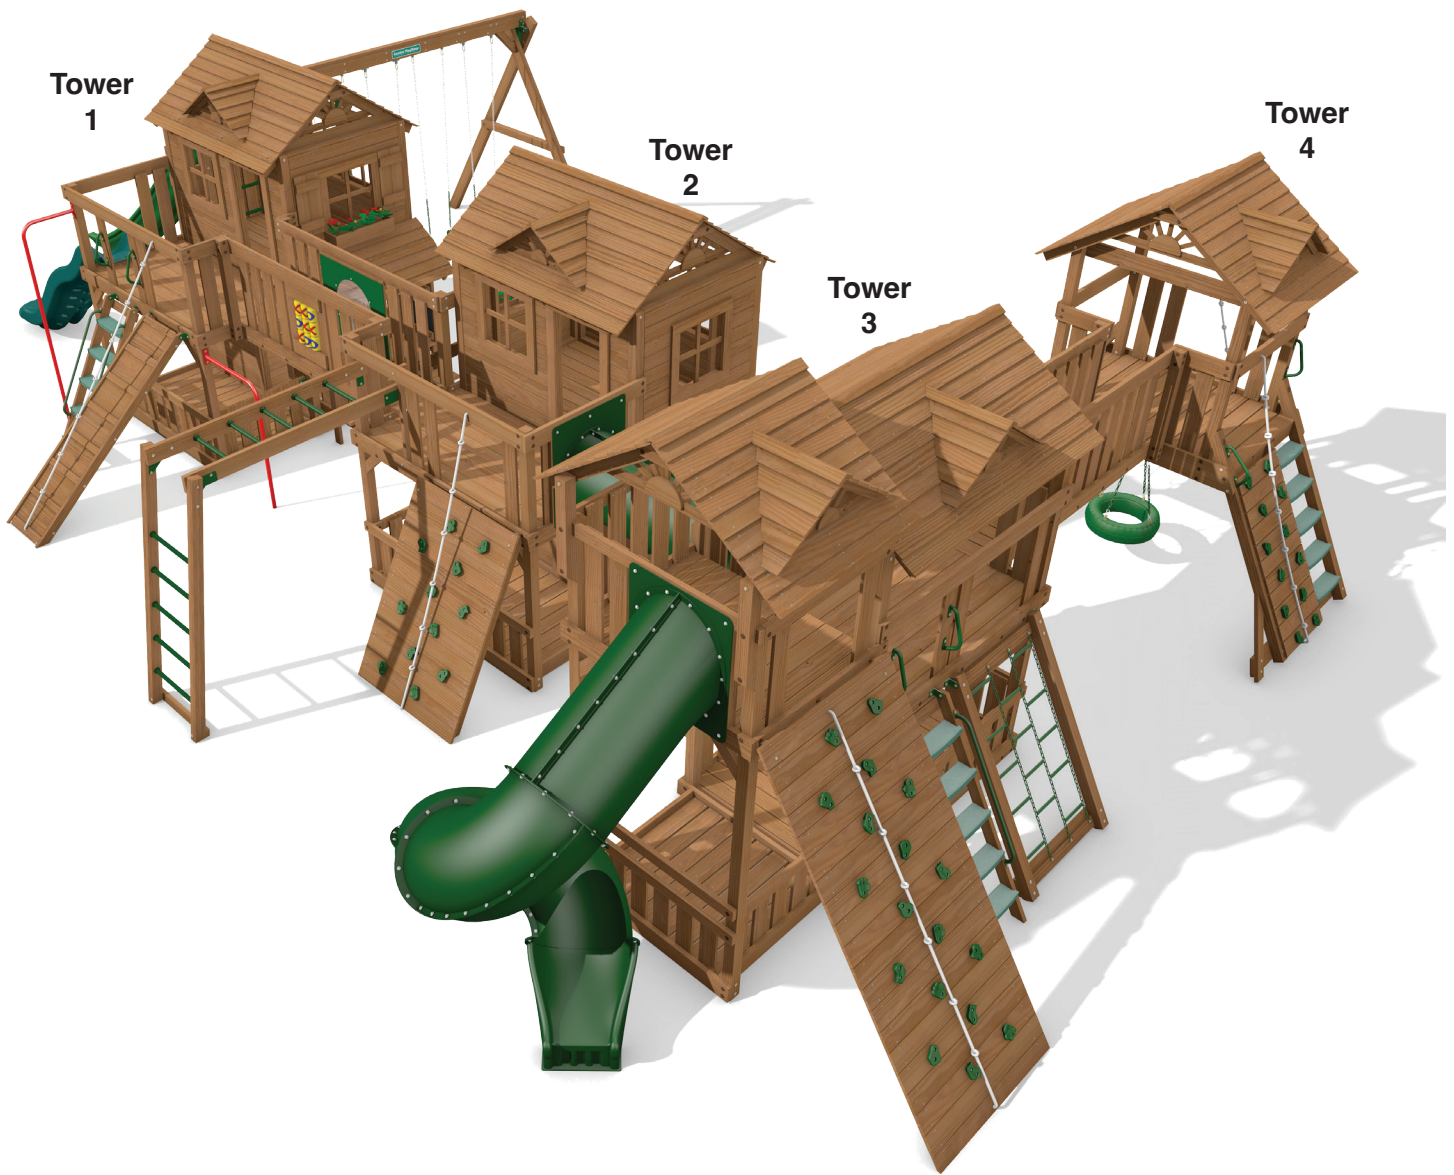

- Mount the Tic-Tac-Toe (50514-100) and the Bubble Panel (AP970-104) to the center front and center back of the Bridge, respectively. Install the wall slats. Leave no gaps larger than 3-1/2".
- Mount the Monkey Bars (63079-102) to the front of tower 2 in the position shown above.
- Assemble the Rock Climbing Wall (AH210-102Q) and mount it to tower 2 in the position shown above.
- Start assembling tower 3 approximately 60" from the end of the tower 2 porch.
- Lex step 2. Omit the sandbox end from the end of the gym adjacent to the Skybox. (See page 3 of the Skybox play floor instructions).
- Before proceeding to build the Lexington, assemble the Crawl Tube (AG939-700) to help determine the final placement of tower 3.
- After Lex step 12, mount the Crawl Tube between tower 2 upper porch and the Lexington of tower 3.
- Lex step 19. Do not install the end wall support on the Skybox end of the tower.
- Skip Lex steps 20 & 21.
- Wait to install the Access Ladder and Wall Slats until after the rest of the tower is complete.
- Once the Lexington roof, roof supports, and ridge cap are installed, proceed with the Skybox tower.
- Skybox step 2. Omit the sandbox end under the gym. The floor transition from the Skybox Play Floor will be used instead.
- Skybox step 11. Use the front posts from The Skybox Roof (SJ926-810) in place of the post extensions.
- Skybox Step 17. Wait to install the wall slats on the back where the Spiral Slide will mount until the slide is in place.
- Install the Skybox Wood Roof (SJ926-810).
- Install the Skybox Play Floor (SC904-800Q) and the Lexington Play Floor (SC910-800Q) using the method found in the Skybox Play Floor instructions on Page 3 titled "Install the Skybox Play Floor adjacent to a gym with a Play Floor." Some parts of the Lex Play Floor will be cut to fit.
- Install the Skybox Play Walls (SC903-800Q) and Lexington Play Walls (SC909-800Q).



- Mount the Spiral Slide (8400-202) to the end of the Skybox using the Spiral Slide Skybox Mount (63033-102).
- Assemble the Pinnacle Rock Wall (SH304-101Q) and mount it to the Skybox in the position shown above.
- Mount the Access Ladder (SH946-102) and Chain Climber (63090-222) to the tower in the positions shown above.
- Assemble tower 4 approximately 94" from tower 3 using the instructions in 63089-116.
- Norfolk step 6. Shift to the instructions included in the Norfolk Bridge Adapter (50572-100). After step 6c return to the Norfolk instructions.
- After Norfolk step 18 move the Norfolk tower frame into place. Use the bridge Supports from the Bridge (SJ951-102) to assure the fit.
- Norfolk step 25. Use the instructions from the Bridge Adapter when attaching the roof panels.
- Skip Norfolk step 29. The swing mount is not needed.
- Norfolk step 30. Wait to install wall slats until after the bridge and ramp are mounted.
- No slide or slide mount are needed.
- After the Norfolk is assembled, build the Bridge between tower 3 and tower 4.
- Mount the Ramp to the back center of tower 4.
- Install wall slats where appropriate on the towers.
IMPORTANT: Gaps must be narrower than 3-1/2", unless they are greater than 9".
- Install Gable Fans (SM964-402) at the end of the roofs on tower 3 and tower 4.
- Assemble five Dormers (SM963-402). Mount one on each roof in the positions shown in the images.
- Mount the hand grips to entrance wall slats or posts adjacent to the access ladders. If there are extra hand grips, add them to a tower adjacent to a climber so as to aid in access.
- Fasten two Access Ladder handles (AG942-400) to each Access Ladder.
- Mount a Slide Handle (AG943-400) above each Super Wave Slide and the 7ft Rocket Slide.
- Double-check all fasteners are secure and all recessed hardware is covered by hole caps.
- Hang the swings.