

The components of this gym can be combined with others to create different play sets. This is the best order of assembly to create this specific set.

Read this sheet and all instructions included with the different parts before assembly.


See the Instructions and Owner's Manual included in carton 63007-445 for important safety information.

Dimensions of assembled package:
24' 4" wide x 20' 7" deep x 12' 9" tall

Cartons for this Play Set:

1	63007-421	Lexington Gym 1 (Hardware)
1	63007-422	Lexington Gym 2
1	63007-423	Lexington Gym 3
1	63007-445	Lexington Roof (Hdwre & Instr)
1	SH946-102	Access Ladder, 5ft
1	AG942-400	Access Ladder Handles (Hdwre & Instr)
1	63058-202	4 Position Swing Beam
1	63060-222	9ft Swing Beam Legs (Hdwre & Instr)
1	50546-777	3 Swings, 1 Trapeze
1	SM964-402	Gable Fans (Hdwre & Instr)
2	SM963-402	Dormer (Hdwre & Instr)
1	SH922-800Q	Ramp (Hdwre & Instr)
1	AH201-102Q	Rock Climbing Wall (Hdwre & Instr)
1	63081-102	Ice Cream Stand (Hdwre & Instr)
1	SC910-800Q	Lexington Play Floor (Hdwre & Instr)
	63008-221	Skybox 1 (Hdwre & Instr)
1	63008-222	Skybox 2
1	SJ926-810	Skybox Wood Roof (Hdwre & Instr)
1	SC904-800Q	Skybox Play Floor (Hdwre & Instr)
1	15140-400	14ft Swoosh Slide
1	50398-700	Swoosh Skybox Kit (Hdwre & Instr)
1	8400-202	Spiral Slide, Green (Hardware)
1	63033-102	Spiral Mount (Hdwre & Instr)
2	40456-402	End Panel
1	40459-402	Double Window Panel
1	40460-402	Door & Window Panel (Hardware)
1	63073-101	Clubhouse Window Pk (Hdwre & Instr)
1	AP970-104	Bubble Panel (Hdwre & Instr)
1	AG943-400	Slide Handle (Hdwre & Instr)

- Start by assembling the Lexington tower. Instructions and hardware are in the cartons noted at left. **The gym is rotated 90° from the position shown in the instructions.**
- Wait to install the Access Ladder, Slide, and Wall Slats until after the rest of the play set is complete.
- Lex step 2. Omit the sandbox end from the end of the gym adjacent to the Skybox. It will be altered to fit the Skybox and play floors.
- Lex step 7 & 8. Do not install the angle braces.
- Lex step 13. Before installing the roof, find the post where the swing beam will mount. Drill 7/16" diameter holes through the post at 3", 7-1/4" and 15-1/2" below the top of the post as shown at right. The beam will be mounted to the front of the post using these holes. Insert one 5/16" weld nut into the top hole on the inside face of the post. Be sure the threads on the weld nut are clear, as it will be captured. Install the roof.
- Lex step 19. Do not install the end wall support on the Skybox end of the tower.
- Lex step 21 & 22 are not needed.
- Mount the Swing Beam using instructions and hardware included in 63060-222. Mount the beam to the previously drilled holes at right rather than the way shown in the instructions. You may need to temporarily disconnect the roof from the post to put the beam in place.

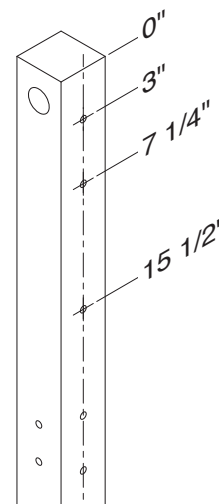



- Once the roof, roof supports, ridge cap and swing beam are installed, proceed with the Skybox tower.
- Skybox step 2. Alter the Lex sandbox end and the skybox sandbox sides as shown on page 5 of the skybox Play Floor instructions found in SC904-800Q.
- Skybox step 11. Use the front posts from The Skybox Roof (SJ926-810) in place of the post extensions.
- Skybox Step 17. Wait to install the wall slats until after installing the bubble and slides.
- Skybox Step 21 & 22. Install the slats in reverse orientation so the opening is on the opposite side. Install the ladder aligned with the opening.
- Install the Skybox Wood Roof (SJ926-810).
- Install the Skybox Play Floor (SC904-800Q) using the method found in the Skybox Play Floor instructions on Page 6. Some parts of the Skybox Play Floor will be cut to fit. Do not install the platform boards until the after the Lexington play floor stringers are installed.
- Install the Lexington Play Floor (SC910-800Q) and complete the skybox play floor.
- Install the Clubhouse Panels (40456-402, 40459-402, & 40460-402), using the instructions and hardware attached to the Door Panel.
- Install the Gable Fans (SM964-402).
- Using a ladder, install the Dormers (SM963-402) in the positions shown on the front page of this guide. Ladder access will be obstructed by later installations.
- Install the Ice Cream Stand (63081-102).
- Mount the 14ft Swoosh Slide (15140-400) to the front of the Skybox using the instructions from 50398-700.
- Install the Bubble Panel (AP970-104) above the Ice Cream Stand.
- Install the Spiral Slide using the instructions in 63033-102. If the lower support bracket can be mounted to the adjacent gym corner post, do it. Otherwise use the included support rail.
- The Rock Climber (AH201-102Q) on the back of the tower.
- Lean the Access Ladder, Wave Slide, and Ramp as shown on the first page of this guide. Check spacing.
- Secure the access ladder using the method shown in step 20 of the Lexington instructions.
- Fasten Access Ladder Handles (AG942-400) to the access ladder.
- Secure the ramp.
- Install the slide mount and slide using the method shown in steps 28 and 29 of the Lexington instructions.
- Install wall slats in the positions shown in images, using the methods from the Lexington and Skybox instructions. Gaps must be narrower than 3-1/2" or wider than 9" to prevent potential head entrapment.
- Mount the hand grips to the entrance wall slats.
- Mount the Slide Handles (AG943-400) above the wave and swoosh slides.
- Install the flower box and shutters from the Window Pack (63073-101) on the window panel below the skybox.
- Double-check all fasteners are secure and all recessed hardware is covered by hole caps.